

WIRING DIAGRAMS

1993 Jeep Cherokee

1993 WIRING DIAGRAMS
Jeep Wiring Diagrams

Jeep; Cherokee

IDENTIFICATION

COMPONENT LOCATION MENU

COMPONENT LOCATIONS TABLE


Component	Location (Fig. No.)
A/C COMP CLUTCH RELAY	B 19 (5)
A/C HEATER LT	B 11 (3)
A/C MODE SELECT SW	A 16-17 (5)
A/C THERMOSTAT	B 19 (5)
ABS MAIN RELAY	C 15 (4)
ABS PUMP/MOTOR RELAY	A 15 (4)
ALTERNATOR	E 3 (1)
ANTI-LOCK BRAKE	A-D 12 (4)
ANTI-THEFT	(11 & 12)
ASHTRAY LT	B 11 (3)
AUTO SHUTDOWN RELAY	A 7 (2)
BACK-UP LT SW	B 16 (5)
BALLAST RESISTOR RELAY	C 7 (2)
BATTERY	A 2 (1)
BEAM SELECT SW	D-E 23 (6)
BLOWER MOTOR	A 19 (5)
BRAKE WARN SW	A 8 (3)
CARGO LT	A 34 (9)
CCD DATA LINK CONN	D 19 (5)
CHIME MODULE	B 8 (3)
CIG LTR	C 11 (3)
CIG LTR LT	C 11 (3)
COOLING FAN RELAY	B 16 (5)
COURTESY LTS	A 33 (9)
CRUISE CONTROL SERVO	A 20 (6)
CRUISE CONTROL SW	A-B 20 (6)
DEFOG SW LT	B 11 (3)
DEFOG SYSTEM	E 34-35 (9)
DIR FLASHER	C 9 (3)
DIR/HAZARD SW	C-D 19 (5)
DOME/READING LT	A 32 (9)
DOOR LOCKS SWS	B-C 26 (7)
DOOR SWS	A 35 (9)
ECE CONN	E 19 (5)
ENGINE DIAG CONN	D 7 (2)
FOG LT RELAY	E 2 (1)
FOG LT SW	A 27 (7)
FRONT AXLE LOCK-UP SW	D 27 (7)
FRONT WASHER MOTOR	D 22 (6)
FUEL PUMP RELAY	B 7 (2)
FUEL TANK UNIT	B 7 (2)
FUSE BLOCK	C-E 9-10 (3)
GEAR SELECT SW	C 16 (5)
GLOVE BOX LT	A 34 (9)
HAZARD FLASHER	E 10 (3)

HEADLT DELAY MODULE	E 23	(7)
HEADLT SW	B-D 23	(6)
HEATER MODE SELECT SW	A 18	(5)
HORN RELAY	E 3	(1)
IGNITION COIL	D 7	(2)
IGNITION SW	A 8-11	(3)
ILLUM LTS	B-C 11	(3)
INSTRUMENT CLUSTER	A-C 24-27	(7)
KEY IN SW	C 19	(5)
KEYLESS ENTRY MODULE	A 31	(8)
LCD ILLUM RELAY	B 23	(6)
LEFT FRONT DOOR SW	B 35	(9)
LIFTGATE LT SW	A 35	(9)
LOCK RELAY	B 31	(8)
PARK BRAKE SW	A 8	(3)
POWER DISTRIBUTION CENTER (PDC)	B-D 3	(1)
POWER DOOR LOCK SYSTEM	A-B 28-31	(8)
POWER MIRRORS	D-E 32-34	(9)
POWER SEAT	B-D 32-33	(9)
POWER WINDOWS	E 31	(8)
REAR WASHER MOTOR	B 35	(9)
REAR WIPER LT	B 11	(3)
REAR WIPER/WASHER	B-C 33-35	(9)
SEAT BELT SW	B 8	(3)
STARTER	A 2	(1)
STARTER RELAY	A 3	(1)
STOP LT RELAY	E 36	(10)
STOP LT SW	A 23	(6)
TRAILER CONN	A 36	(10)
TRAILER TOW IN-LINE CB	E 37	(10)
TRANS CONTROL UNOT (TCU)	D-E 16	(5)
TRANSFER CASE LT	B 11	(3)
TRANSMISSION	E 17-16	(5)
TRANSMISSION RANGE RW LT	B 11	(3)
UNDERHOOD LT	B 1	(1)
VANITY LTS	A 32-33	(9)
W/SHIELD WIPER SW	C-E 20	(6)
WARNING INDICATORS	D 24-27	(7)
WASHER FLUID LEVEL SW	C-D 27	(7)
WIPER CIRCUIT BREAKER	C 9	(3)
WIPER MOTOR	D 22	(6)

GROUND LOCATIONS TABLE


Component	Location (Fig. No.)
GROUND A: (RIGHT SIDE FENDER SHIELD)	A 1 (1)
GROUND B: (RIGHT REAR OF ENGINE 4.0L)	A 1 (1)
GROUND C: (RIGHT REAR OF ENGINE)	D 2 (1)
GROUND D: (RIGHT REAR OF ENGINE)	D 7 (2)
GROUND E: (RIGHT SIDE OF ENGINE 2.5L)	E 4 (2)
(RIGHT REAR OF ENGINE 4.0L)	E 4 (2)
GROUND F: (LEFT SIDE SHIELD)	A 15 (4)
GROUND G: (LEFT SIDE COWL)	A-B 13 (4)
GROUND H: (RIGHT SIDE SHIELD)	B 22 (6)
GROUND I: (LEFT SIDE SHIELD)	E 24 (7)
GROUND J: (RIGHT SIDE KICK PANEL)	E 26 (7)
GROUND K: (LEFT SIDE COVER)	E 39 (10)

WIRING DIAGRAMS

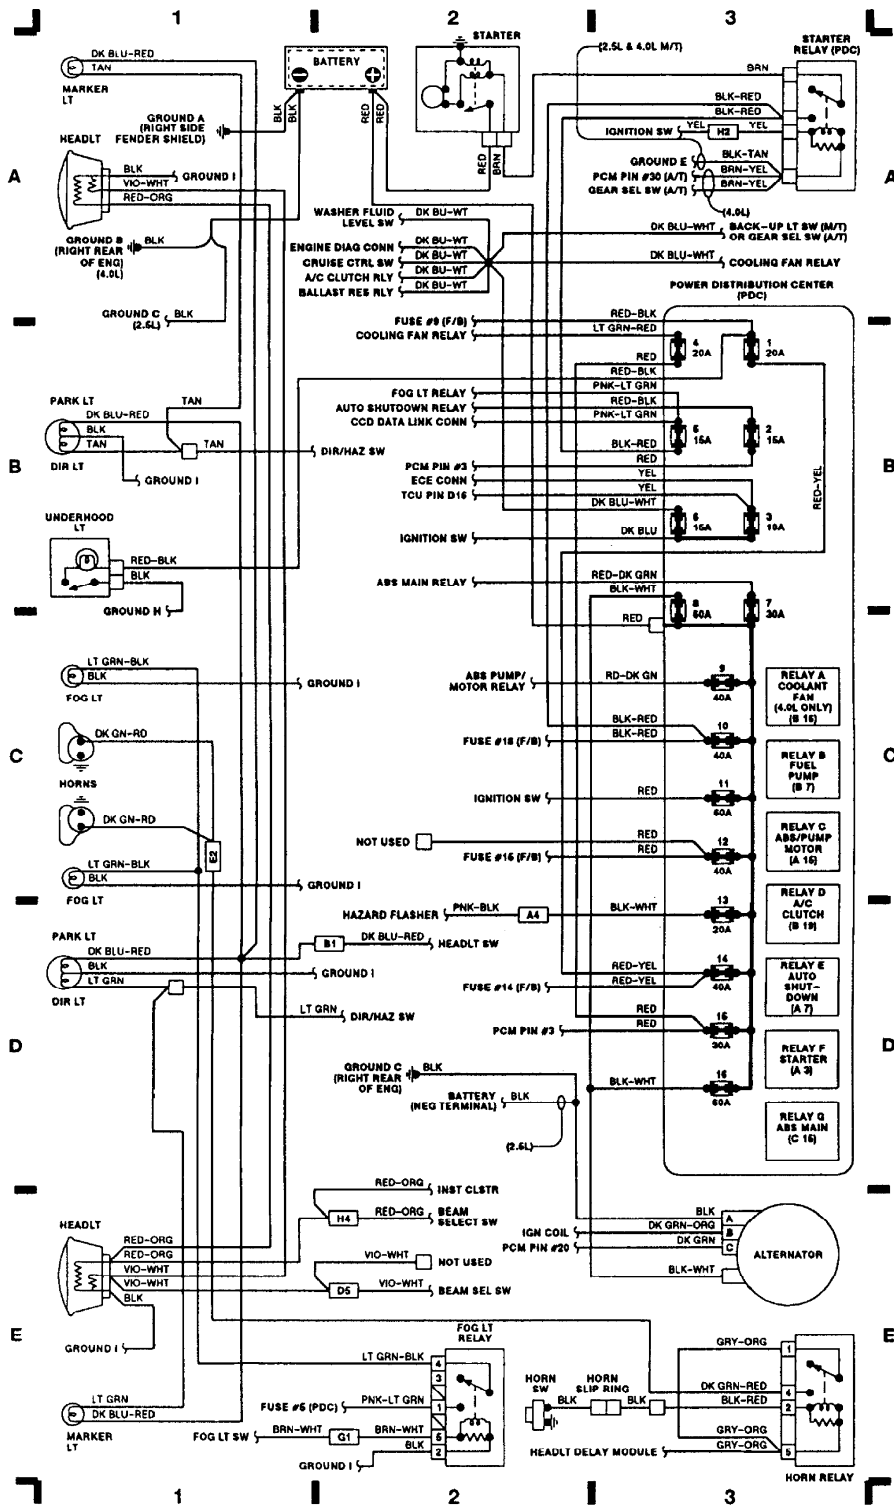


93E77838


Fig. 1: Engine Compartment & Headlights (Grids 1-3)

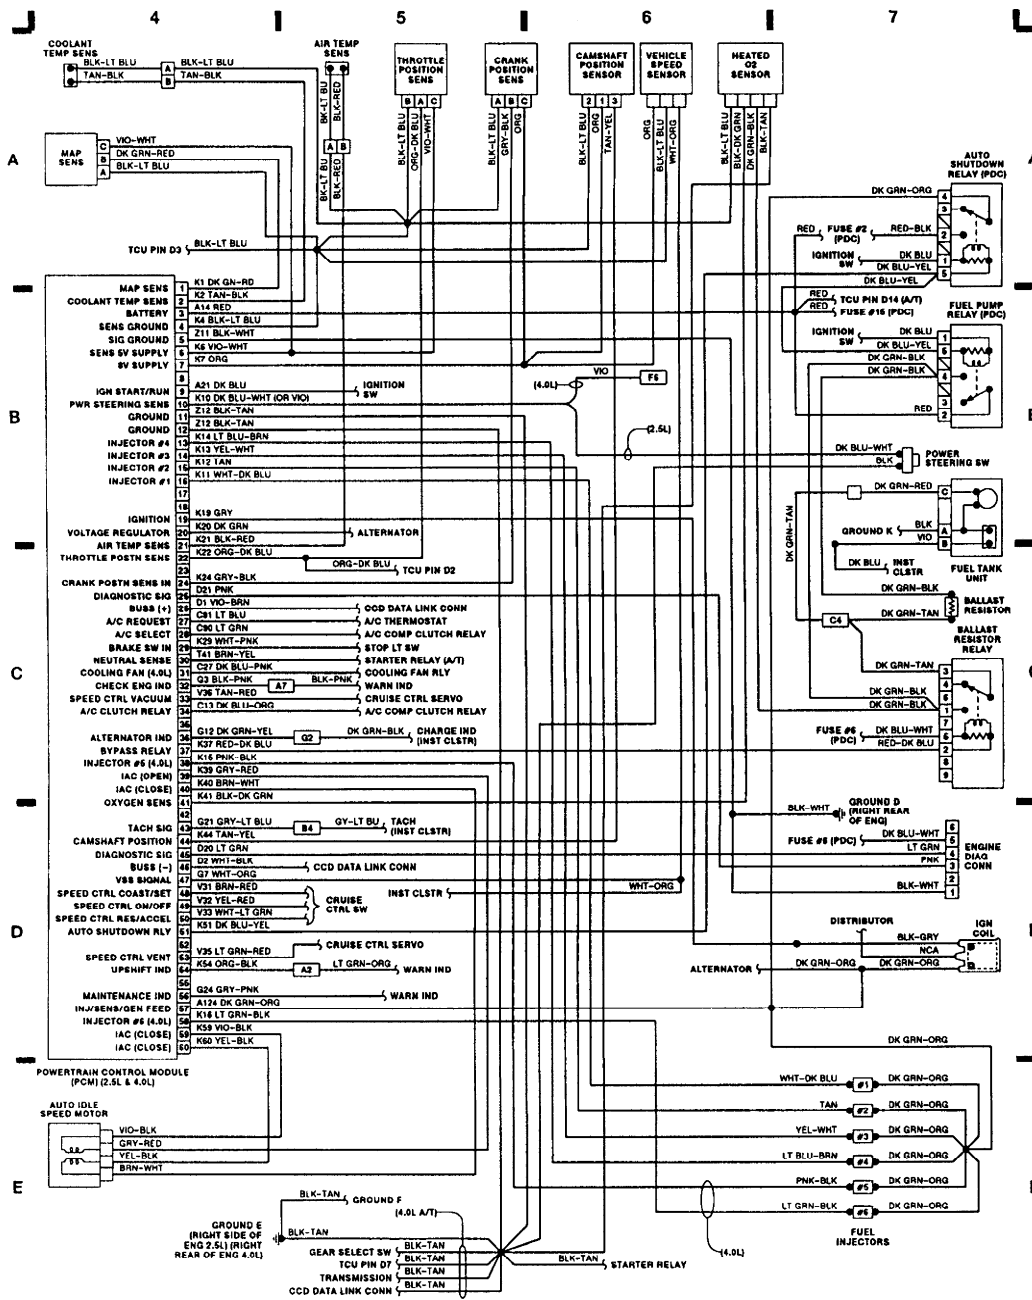


93F77839
 Fig. 2: Powertrain Control Module (PCM) (2.5L & 4.0L) (Grids 4-7)

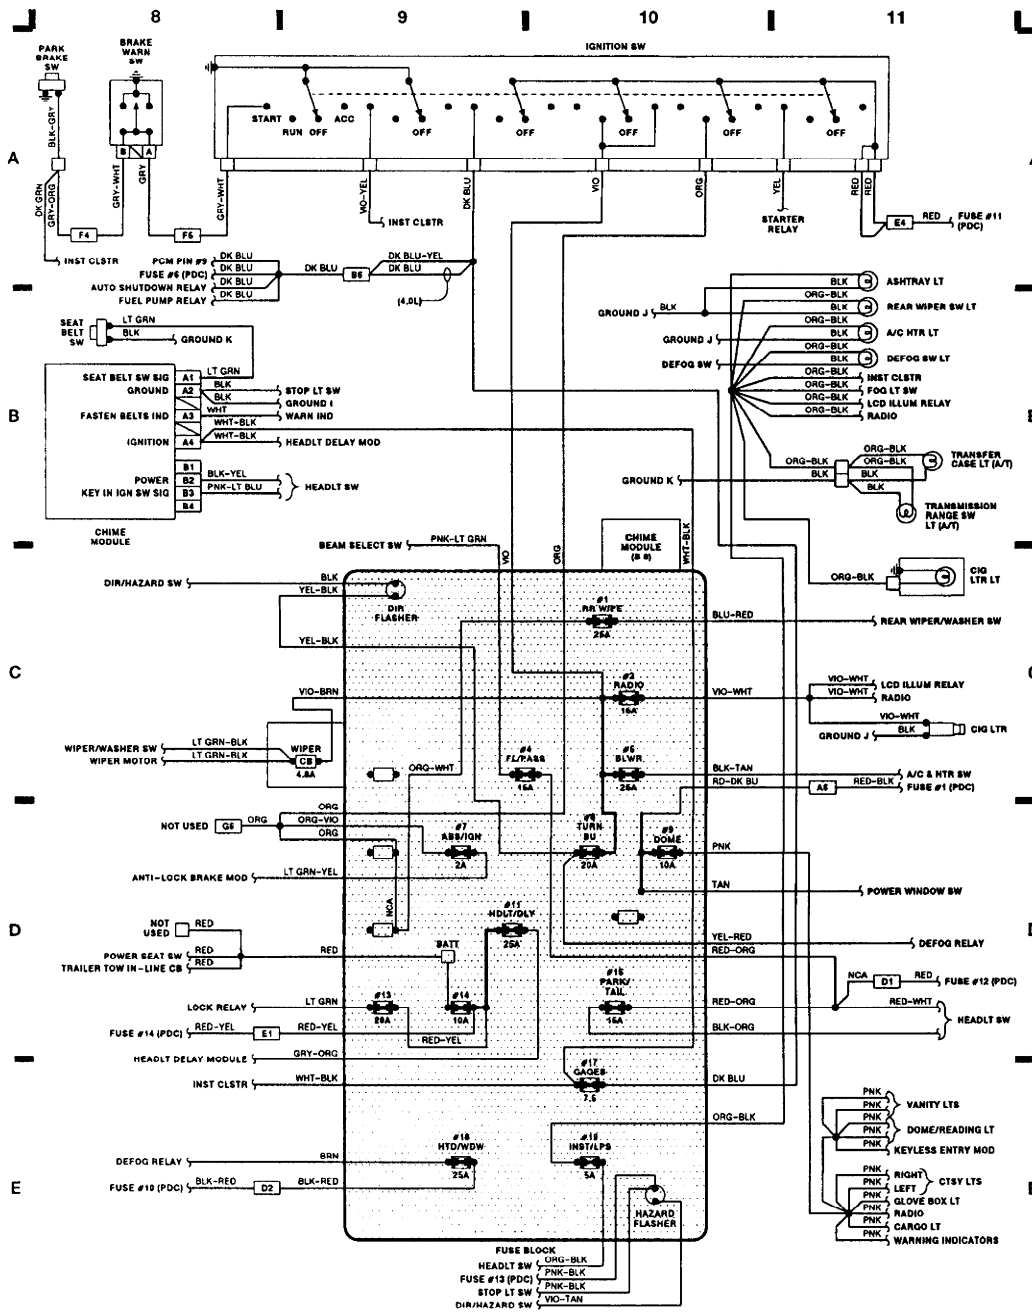


93177840
 Fig. 3: Ignition Switch (Grids 8-11)

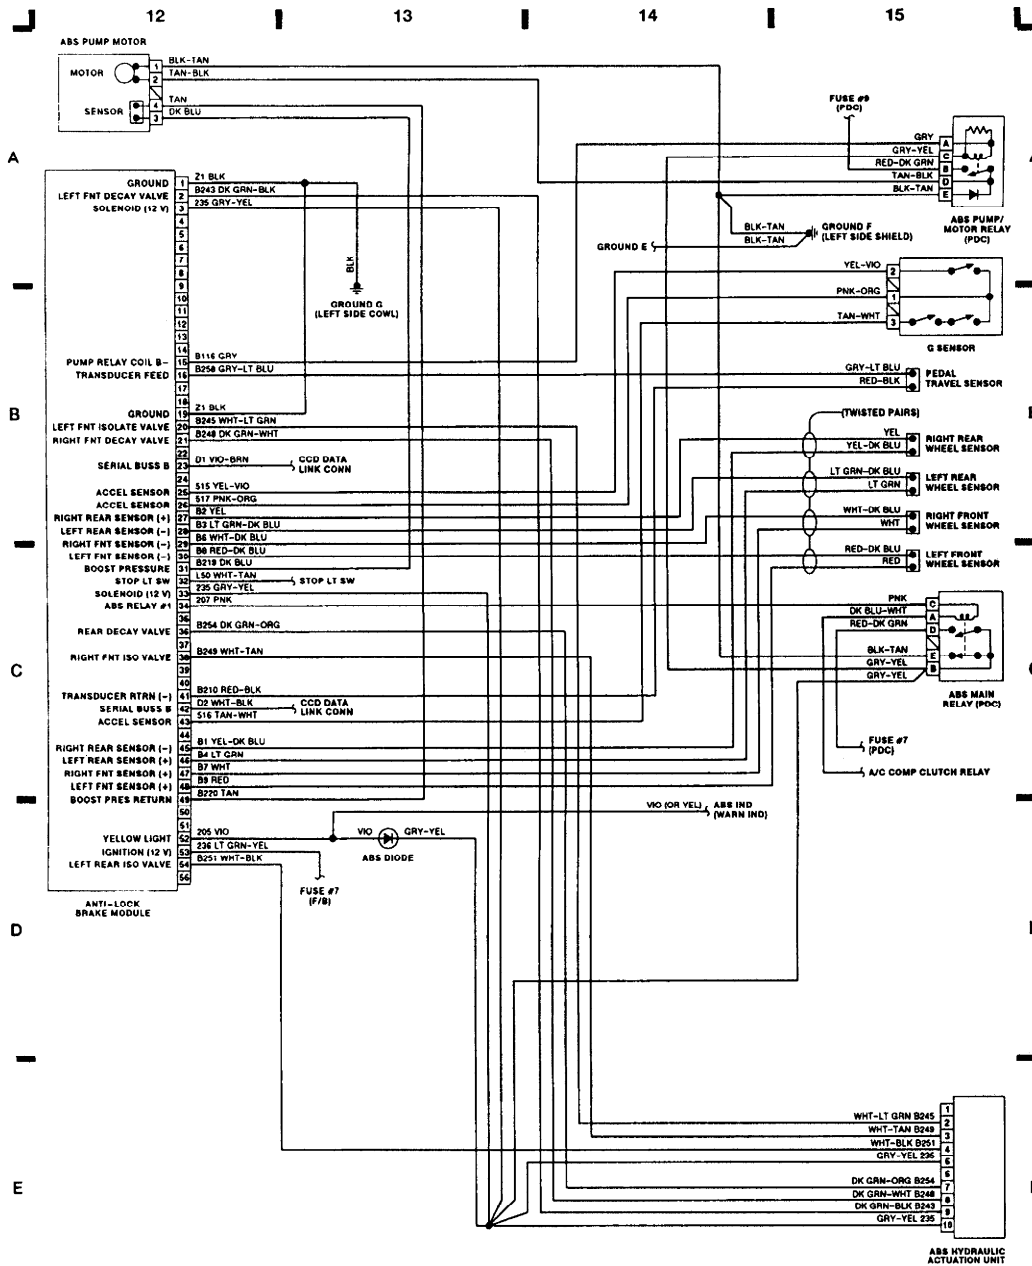


93J77841
 Fig. 4: Anti-Lock Brake Module, ABS Pump Motor (Grids 12-15)

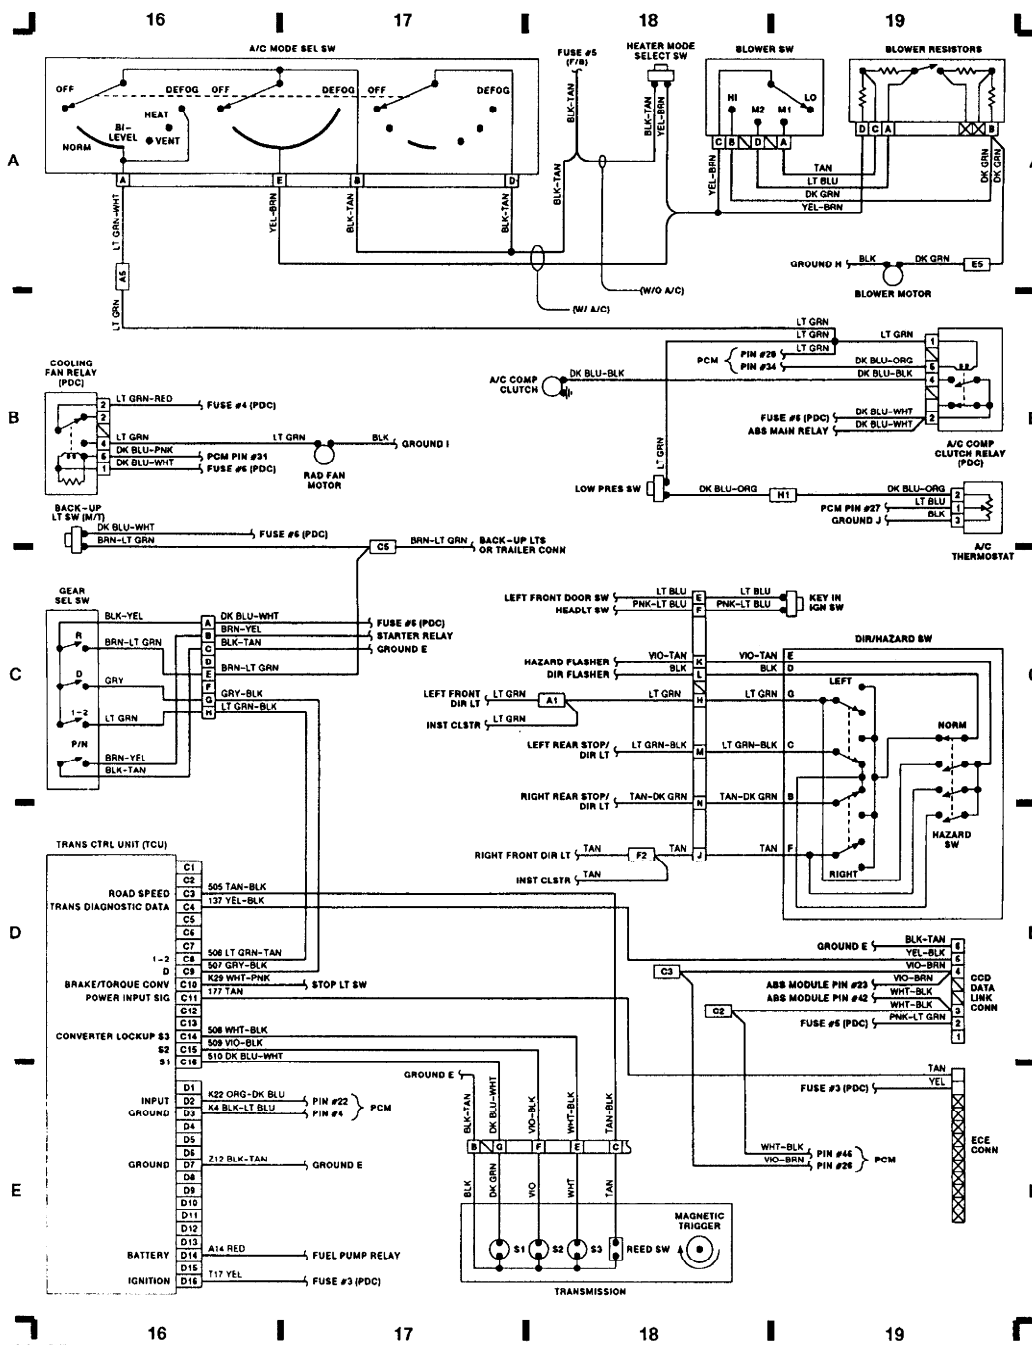

93A77842
 Fig. 5: Dir/Hazard Switch, Trans Control Unit (TCU) (Grids 16-19)

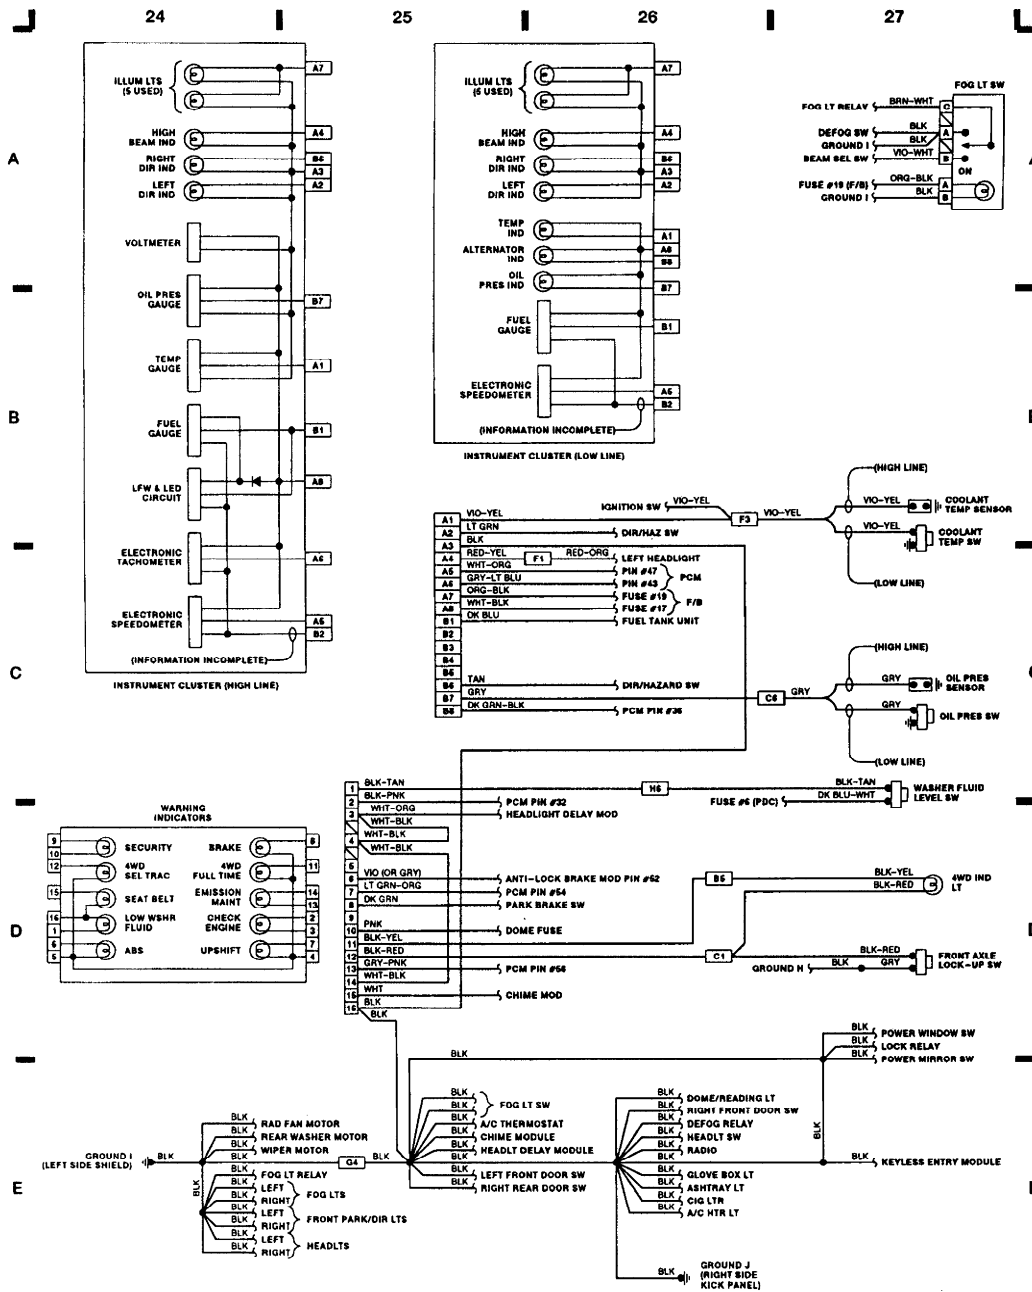


93C77844
 Fig. 7: Instrument Cluster (High Line), (Low Line) (Grids 24-27)

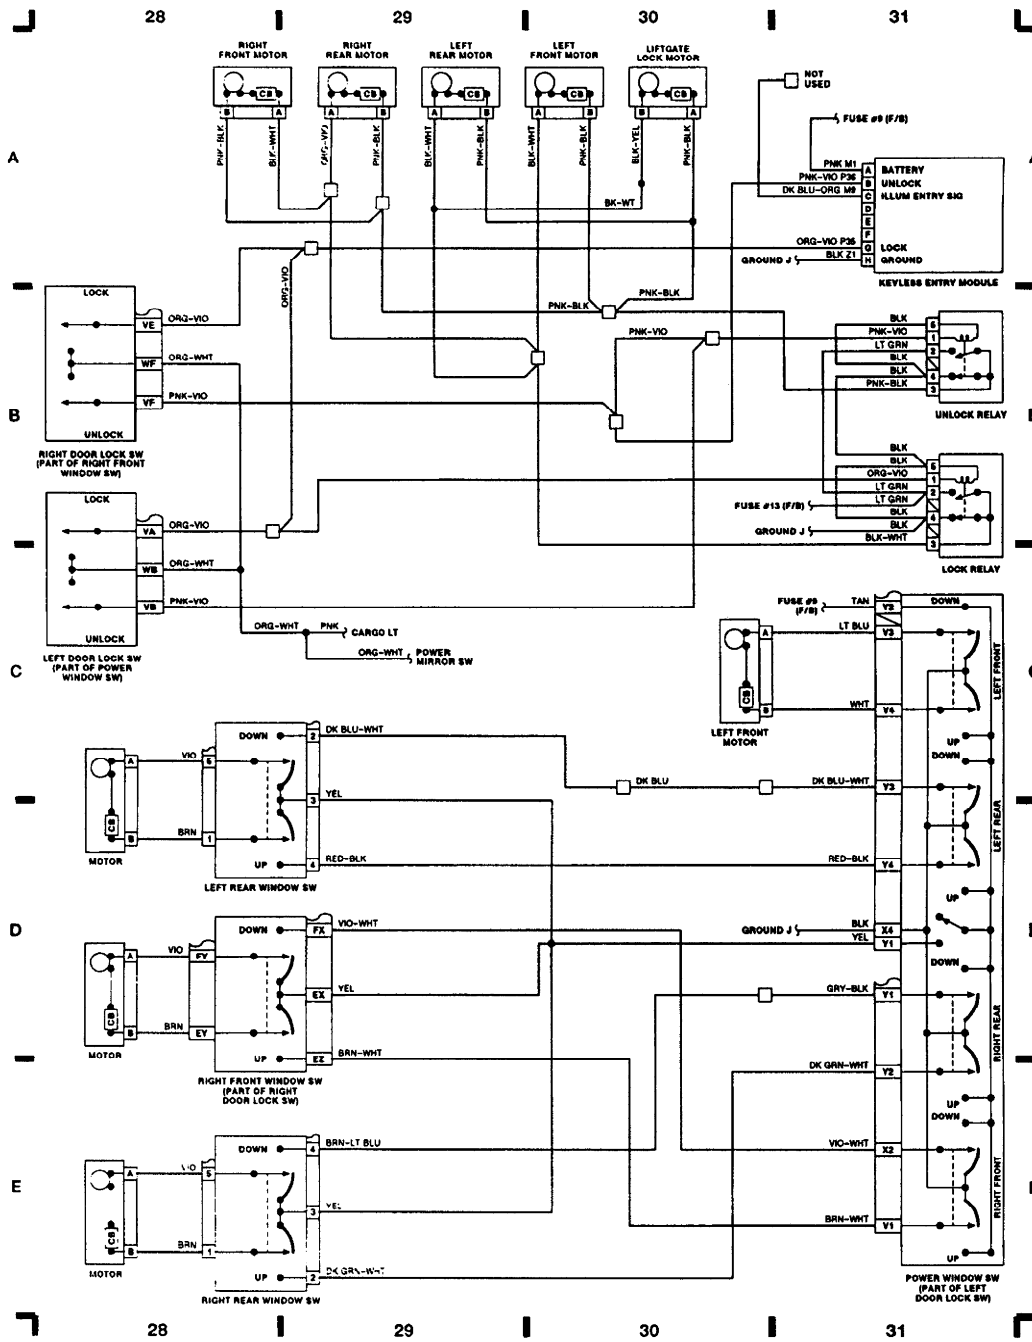


93D77845


Fig. 8: Power Window Switch, Right and Left Door Switch (Grids 28-31)

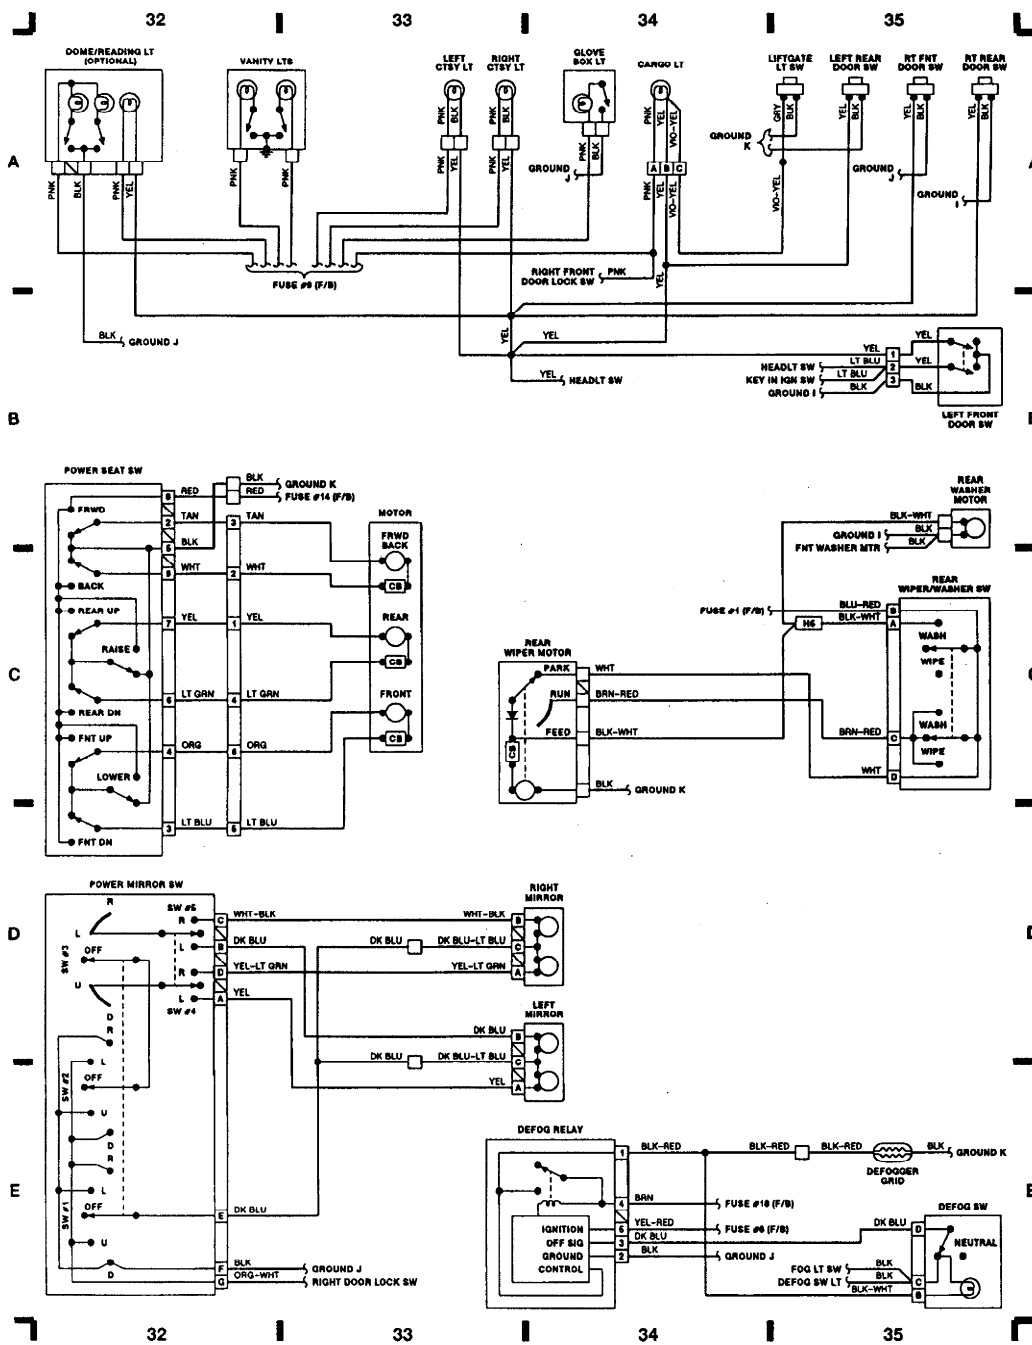

93E77846
 Fig. 9: Power Mirror Switch, Power Seat Switch (Grids 32-35)

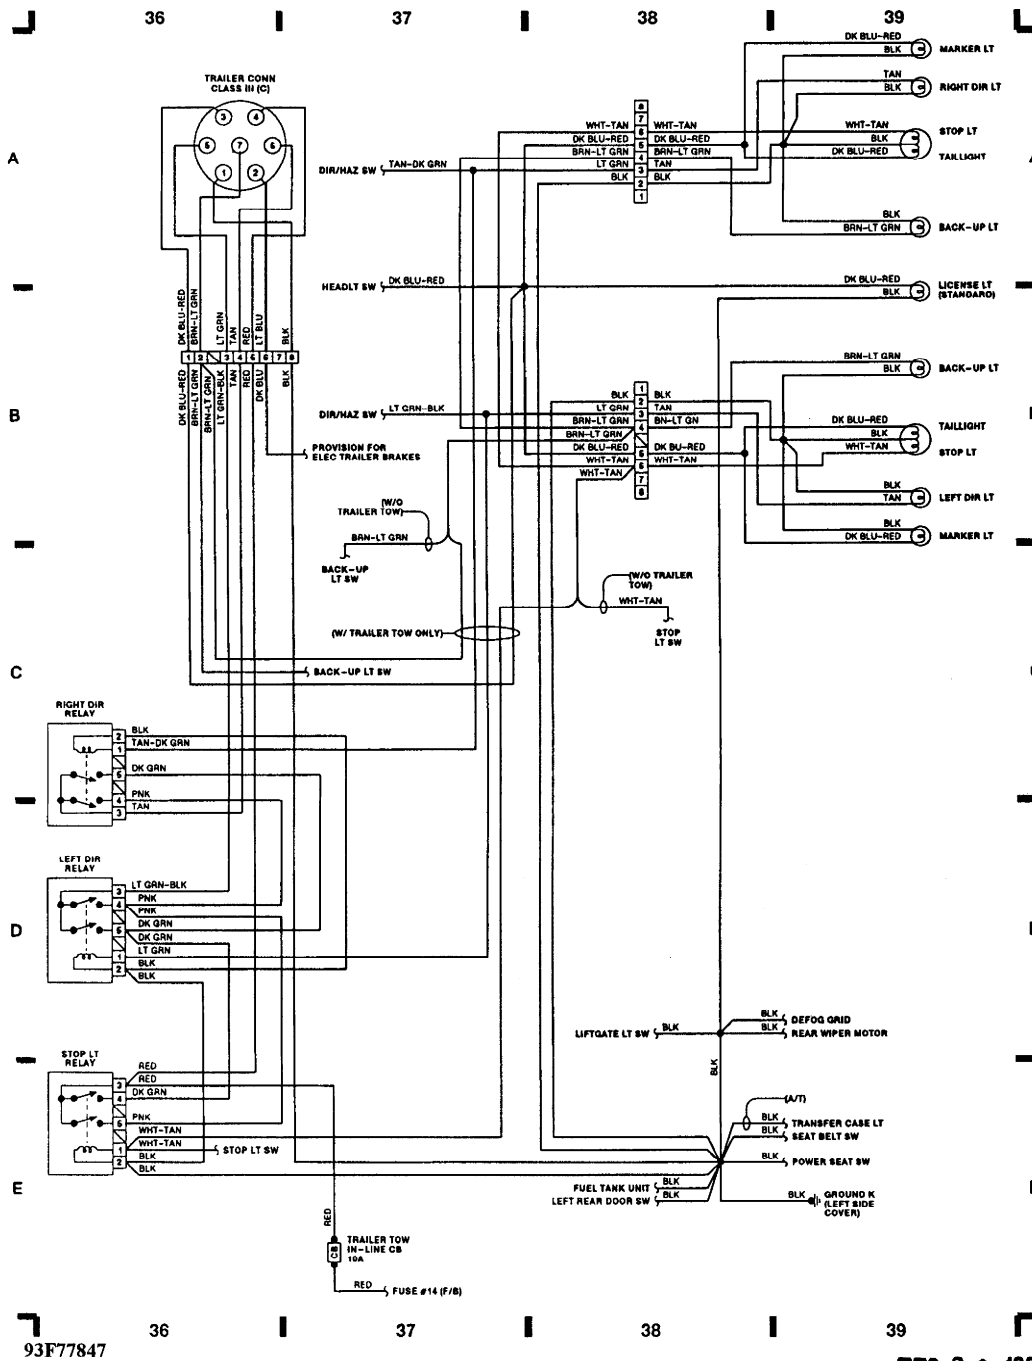

93F77847
 Fig. 10: Power Mirror, Window Switches & Taillights (Grids 36-39)

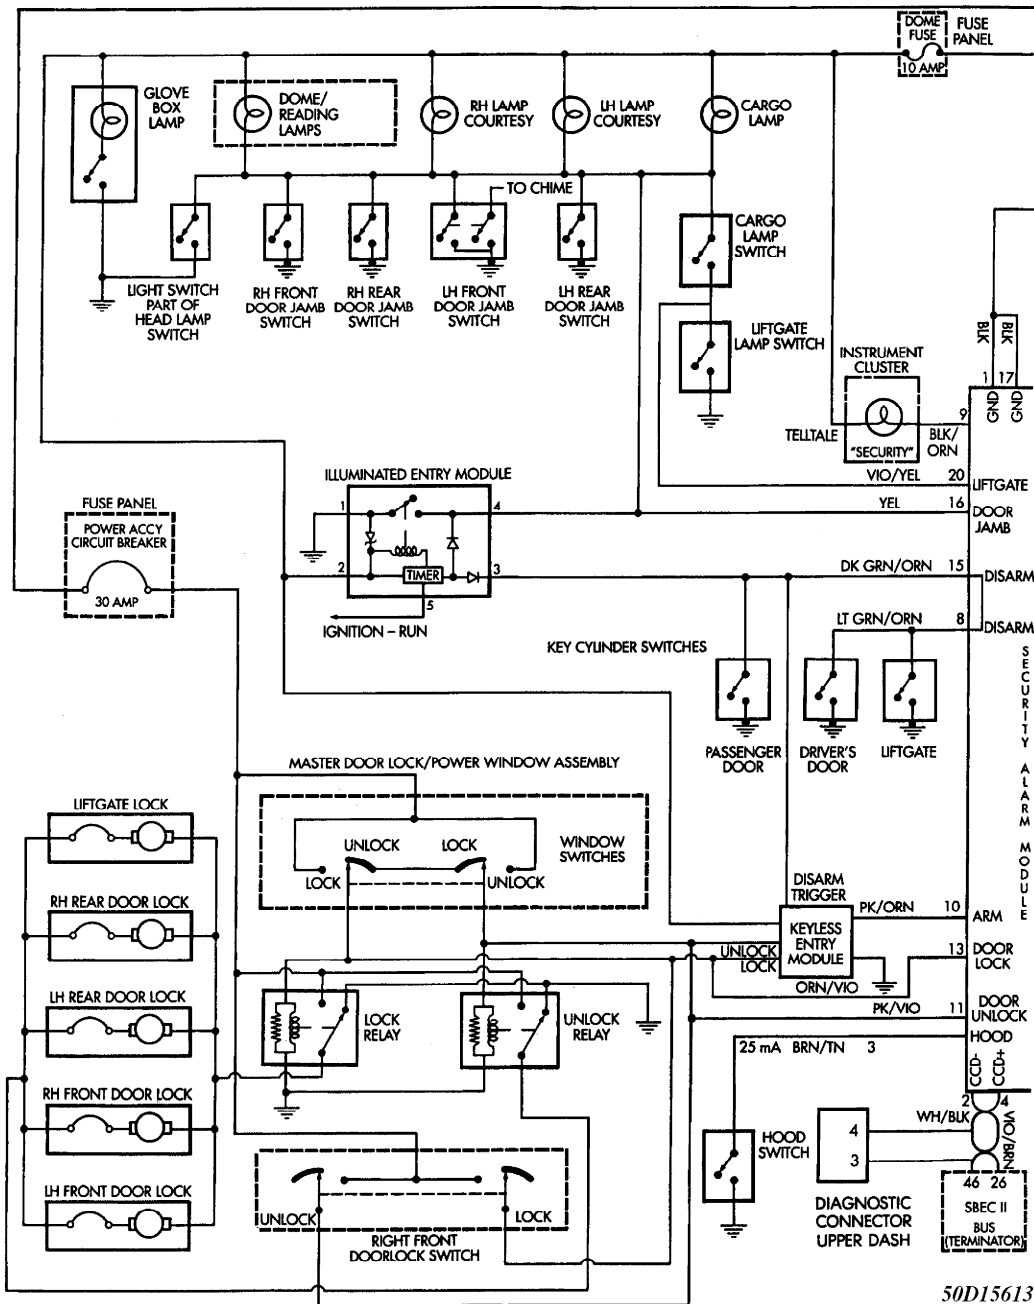

50D15613

Fig. 11: Anti-Theft System (1 of 2)

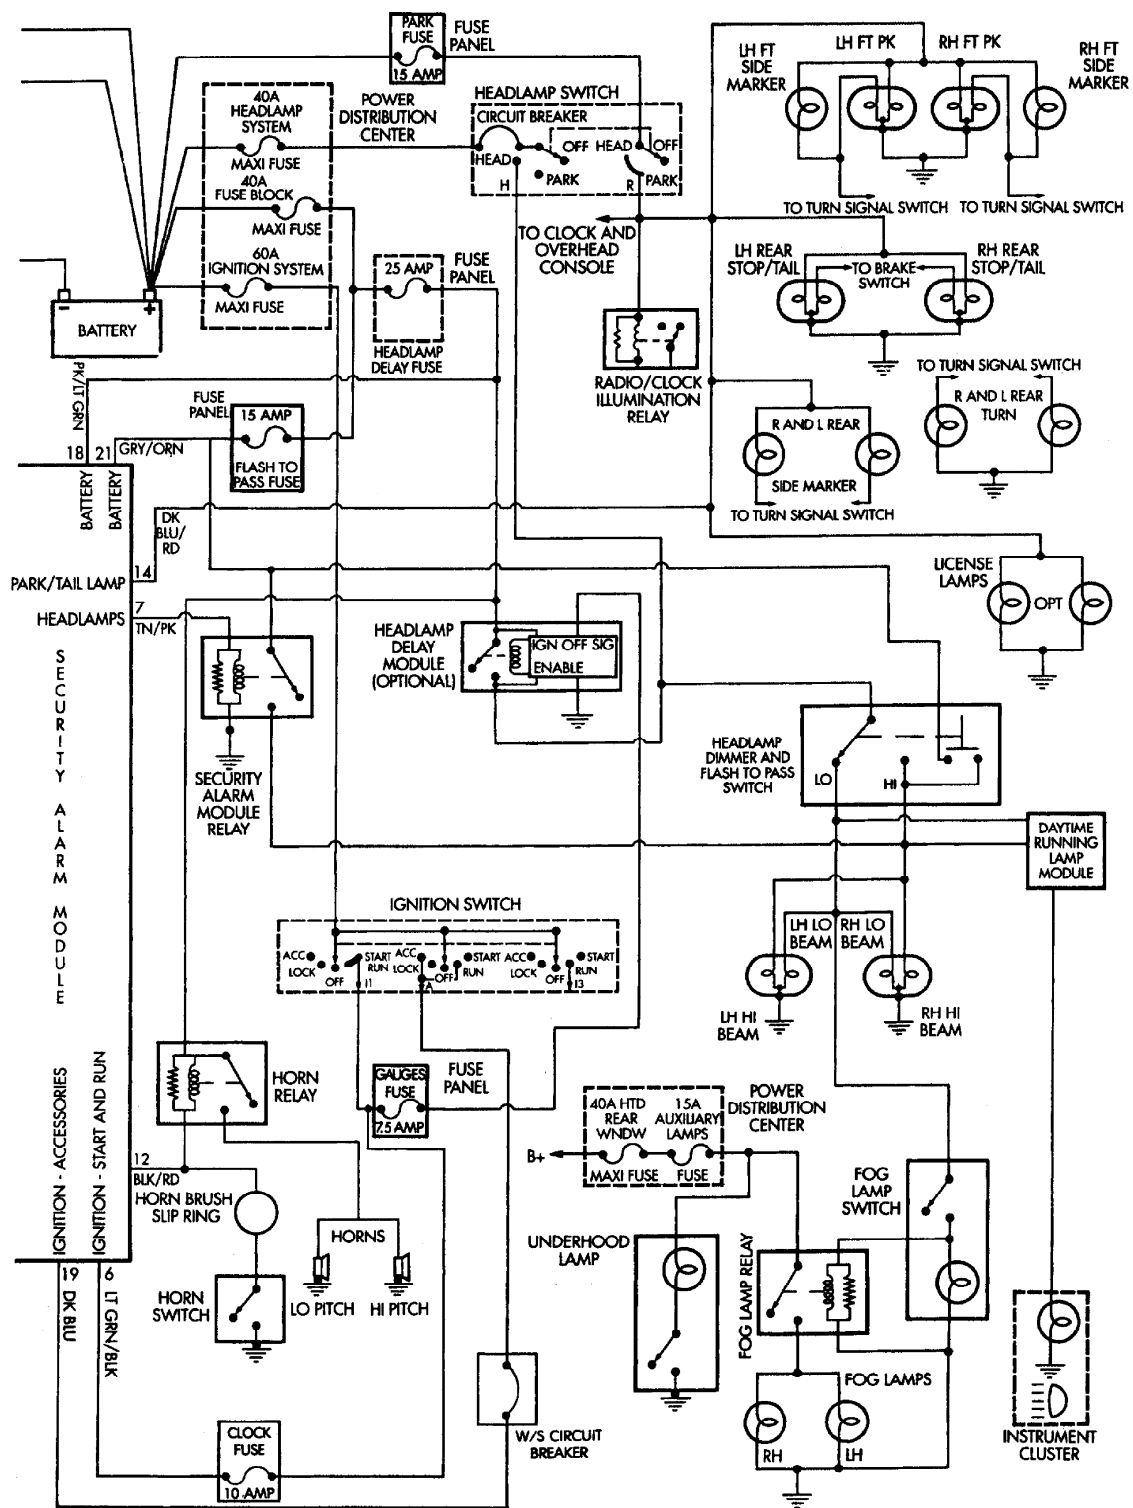


Fig. 12: Anti-Theft System (2 of 2)