

LAMPS

CONTENTS

	page		page
BULB APPLICATION	18	LAMP DIAGNOSIS	1
HEADLAMP ALIGNMENT	5	LAMP SERVICE	12
LAMP BULB SERVICE	8	LAMP SYSTEMS	16

LAMP DIAGNOSIS

INDEX

	page			page
GENERAL INFORMATION		DIAGNOSIS AND TESTING		
GENERAL INFORMATION	1	DIAGNOSTIC PROCEDURES		1
SAFETY PRECAUTIONS	1	SYSTEM DIAGNOSIS		1

GENERAL INFORMATION

GENERAL INFORMATION

Each vehicle is equipped with various lamp assemblies. A good ground is necessary for proper lighting operation. Grounding is provided by the lamp socket when it comes in contact with the metal body, or through a separate ground wire.

When changing lamp bulbs check the socket for corrosion. If corrosion is present, clean it with a wire brush and coat the inside of the socket lightly with Mopar Multi-Purpose Grease or equivalent.

SAFETY PRECAUTIONS

WARNING: EYE PROTECTION SHOULD BE USED WHEN SERVICING GLASS COMPONENTS. PERSONAL INJURY CAN RESULT.

CAUTION: Do not touch the glass of halogen bulbs with fingers or other possibly oily surface, reduced bulb life will result.

Do not use bulbs with higher candle power than indicated in the Bulb Application table at the end of this group. Damage to lamp and/or Daytime Running Lamp Module can result.

Do not use fuses, circuit breakers or relays having greater amperage value than indicated on the fuse panel or in the Owners Manual.

When it is necessary to remove components to service another, it should not be necessary to apply excessive force or bend a component to remove it. Before damaging a trim component, verify hidden fasteners or captured edges are not holding the component in place.

DIAGNOSIS AND TESTING

DIAGNOSTIC PROCEDURES

When a vehicle experiences problems with the headlamp system, verify the condition of the battery connections, fuses, charging system, headlamp bulbs, wire connectors, relay, high beam switch, dimmer switch, and headlamp switch. Refer to Group 8W, Wiring Diagrams for component locations and circuit information.

SYSTEM DIAGNOSIS

HEADLAMP

Always begin any diagnosis by testing all of the fuses and circuit breakers in the system. Refer to Group 8W, Wiring Diagrams.

Conventional and halogen headlamps are interchangeable. It is recommended that they not be intermixed on a given vehicle.

DIAGNOSIS AND TESTING (Continued)

CONDITION	POSSIBLE CAUSES	CORRECTION
HEADLAMPS ARE DIM WITH ENGINE IDLING OR IGNITION TURNED OFF	<ol style="list-style-type: none"> 1. Loose or corroded battery cables. 2. Loose or worn generator drive belt. 3. Charging system output too low. 4. Battery has insufficient charge. 5. Battery is sulfated or shorted. 6. Poor lighting circuit Z1-ground. 7. Both headlamp bulbs defective. 	<ol style="list-style-type: none"> 1. Clean and secure battery cable clamps and posts. 2. Adjust or replace generator drive belt. 3. Test and repair charging system, refer to Group 8A, 4. Test battery state-of-charge, refer to Group 8A. 5. Load test battery, refer to Group 8A. 6. Test for voltage drop across Z1-ground locations, refer to Group 8W. 7. Replace both headlamp bulbs.
HEADLAMP BULBS BURN OUT FREQUENTLY	<ol style="list-style-type: none"> 1. Charging system output too high. 2. Loose or corroded terminals or splices in circuit. 	<ol style="list-style-type: none"> 1. Test and repair charging system, refer to Group 8A. 2. Inspect and repair all connectors and splices, refer to Group 8W.
HEADLAMPS ARE DIM WITH ENGINE RUNNING ABOVE IDLE*	<ol style="list-style-type: none"> 1. Charging system output too low. 2. Poor lighting circuit Z1-ground. 3. High resistance in headlamp circuit. 4. Both headlamp bulbs defective. 	<ol style="list-style-type: none"> 1. Test and repair charging system, refer to Group 8A. 2. Test for voltage drop across Z1-ground locations, refer to Group 8W. 3. Test amperage draw of headlamp circuit. 4. Replace both headlamp bulbs.
HEADLAMPS FLASH RANDOMLY	<ol style="list-style-type: none"> 1. Poor lighting circuit Z1-ground. 2. High resistance in headlamp circuit. 3. Faulty headlamp switch. 4. Loose or corroded terminals or splices in circuit. 	<ol style="list-style-type: none"> 1. Test for voltage drop across Z1-ground locations, refer to Group 8W. 2. Test amperage draw of headlamp circuit. Should not exceed 30 amps. 3. Replace headlamp switch. 4. Inspect and repair all connectors and splices, refer to Group 8W.
HEADLAMPS DO NOT ILLUMINATE	<ol style="list-style-type: none"> 1. No voltage to headlamps. 2. No Z1-ground at headlamps. 3. Faulty headlamp switch. 4. Faulty headlamp dimmer (multi-function) switch. 5. Broken connector terminal or wire splice in headlamp circuit. 	<ol style="list-style-type: none"> 1. Repair open headlamp circuit, refer to Group 8W. 2. Repair circuit ground, refer to Group 8W. 3. Replace headlamp switch. 4. Replace multi-function switch. 5. Repair connector terminal or wire splice.

*Canada vehicles must have lamps ON.

DIAGNOSIS AND TESTING (Continued)

FOG LAMP

CONDITION	POSSIBLE CAUSES	CORRECTION
<p>FOG LAMPS ARE DIM WITH ENGINE IDLING OR IGNITION TURNED OFF.</p>	<ol style="list-style-type: none"> 1. Loose or corroded battery cables. 2. Loose or worn generator drive belt. 3. Charging system output too low. 4. Battery has insufficient charge. 5. Battery is sulfated or shorted. 6. Poor lighting circuit Z1-ground. 	<ol style="list-style-type: none"> 1. Clean and secure battery cable clamps and posts. 2. Adjust or replace generator drive belt. 3. Test and repair charging system. Refer to Group 8A, 4. Test battery state-of -charge. Refer to Group 8A. 5. Load test battery. Refer to Group 8A. 6. Test for voltage drop across Z1-ground locations. Refer to Group 8W.
<p>FOG LAMP BULBS BURN OUT FREQUENTLY</p>	<ol style="list-style-type: none"> 1. Charging system output too high. 2. Loose or corroded terminals or splices in circuit. 	<ol style="list-style-type: none"> 1. Test and repair charging system. Refer to Group 8A. 2. Inspect and repair all connectors and splices. Refer to Group 8W.
<p>FOG LAMPS ARE DIM WITH ENGINE RUNNING ABOVE IDLE</p>	<ol style="list-style-type: none"> 1. Charging system output too low. 2. Poor lighting circuit Z1-ground. 3. High resistance in fog lamp circuit. 	<ol style="list-style-type: none"> 1. Test and repair charging system. Refer to Group 8A. 2. Test for voltage drop across Z1-ground locations. Refer to Group 8W. 3. Test amperage draw of fog lamp circuit.
<p>FOG LAMPS FLASH RANDOMLY</p>	<ol style="list-style-type: none"> 1. Poor lighting circuit Z1-ground. 2. High resistance in fog lamp circuit. 3. Faulty fog lamp switch. 4. Loose or corroded terminals or splices in circuit. 	<ol style="list-style-type: none"> 1. Test for voltage drop across Z1-ground locations. Refer to Group 8W. 2. Test amperage draw of fog lamp circuit. 3. Replace fog lamp switch. 4. Inspect and repair all connectors and splices. Refer to Group 8W.
<p>FOG LAMPS DO NOT ILLUMINATE</p>	<ol style="list-style-type: none"> 1. Blown fuse for fog lamp. 2. No Z1-ground at fog lamps. 3. Faulty fog lamp switch. 4. Broken connector terminal or wire splice in fog lamp circuit. 5. Defective or burned out bulb. 	<ol style="list-style-type: none"> 1. Replace fuse. Refer to Group 8W. 2. Repair circuit ground. Refer to Group 8W. 3. Replace fog lamp switch. 4. Repair connector terminal or wire splice. 5. Replace bulb.

DIAGNOSIS AND TESTING (Continued)

HEADLAMP DELAY MODULE

DELAY FUNCTION INOPERATIVE

- (1) Ensure headlamps operate before proceeding.
- (2) Remove, inspect and test the HDLP delay 10 amp fuse in junction box. Replace if defective.
- (3) With the key off and the connector disconnected, measure the resistance from the delay module connector, terminal 4 to vehicle body ground. The ohmmeter should indicate zero ohms. If not, repair the open circuit in the wire harness to vehicle body ground.
- (4) With the key on measure the voltage between the delay module connector, terminal 8 and vehicle

body ground. The voltmeter should indicate battery voltage. If not, repair the open circuit in the wire harness from ignition switch to HDLP delay module.

- (5) Turn headlamps on and measure voltage at delay module connector, terminal 6. The voltmeter should indicate battery voltage. If not repair open circuit between L2 and HDLP delay module.

- (6) Measure the voltage between the delay module connector, terminal 2 and vehicle body ground. The voltmeter should indicate battery voltage. If not, repair the open circuit in the wire harness to the HDLP fuse in the PDC.

- (7) If steps 1 through 6 prove out good, replace headlamp delay module.

HEADLAMP ALIGNMENT

INDEX

	page		page
GENERAL INFORMATION		LAMP ALIGNMENT SCREEN PREPARATION	5
HEADLAMP ALIGNMENT	5	VEHICLE PREPARATION FOR HEADLAMP	
SERVICE PROCEDURES		ALIGNMENT	6
FOG LAMP ADJUSTMENT	6	SPECIAL TOOLS	
HEADLAMP ADJUSTMENT	6	HEADLAMP ALIGNMENT	7

GENERAL INFORMATION

HEADLAMP ALIGNMENT

Headlamps can be aligned using the screen method provided in this section. Alignment Tool C-4466-A or equivalent can also be used. Refer to instructions provided with the tool for proper procedures.

SERVICE PROCEDURES

LAMP ALIGNMENT SCREEN PREPARATION

(1) Position vehicle on a level surface perpendicular to a flat wall 7.62 meters (25 ft) away from front of headlamp lens (Fig. 1).

(2) If necessary, tape a line on the floor 7.62 meters (25 ft) away from and parallel to the wall.

(3) Measure from the floor up 1.27 meters (5 ft) and tape a line on the wall at the centerline of the vehicle. Sight along the centerline of the vehicle (from rear of vehicle forward) to verify accuracy of the line placement.

(4) Rock vehicle side-to-side three times to allow suspension to stabilize.

(5) Jounce front suspension three times by pushing downward on front bumper and releasing.

(6) Measure the distance from the center of headlamp lens to the floor. Transfer measurement to the alignment screen (with tape). Use this line for up/down adjustment reference.

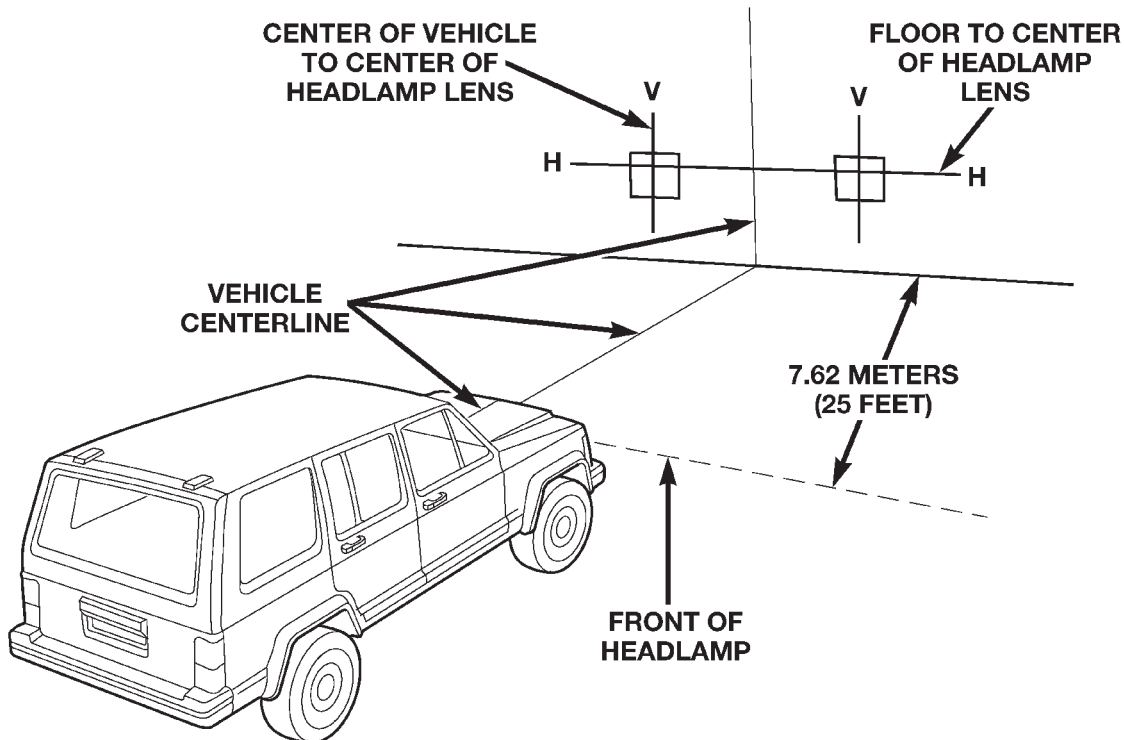


Fig. 1 Headlamp Alignment Screen—Typical

SERVICE PROCEDURES (Continued)

(7) Measure distance from the centerline of the vehicle to the center of each headlamp being aligned. Transfer measurements to screen (with tape) to each side of vehicle centerline. Use these lines for left/right adjustment reference.

VEHICLE PREPARATION FOR HEADLAMP ALIGNMENT

- (1) Verify headlamp dimmer switch and high beam indicator operation.
- (2) Correct defective components that could hinder proper headlamp alignment.
- (3) Verify proper tire inflation.
- (4) Clean headlamp lenses.
- (5) Verify that luggage area is not heavily loaded.
- (6) Fuel tank should be FULL. Add 2.94 kg (6.5 lbs.) of weight over the fuel tank for each estimated gallon of missing fuel.

HEADLAMP ADJUSTMENT

Headlamps can be aligned using the screen method. The Headlamp Alignment Tool C-4466-A or equivalent can also be used. Refer to instructions provided with the tool for proper procedures.

A properly aimed low beam will project the top edge of the beam intensity pattern on the screen from 25 mm (1 in.) above to 75 mm (3 in.) below headlamp centerline. The side-to-side left edge of the beam intensity pattern should be from 50 mm (2 in.) left to 50 mm (2 in.) right of headlamp centerline (Fig. 2).

- (1) Remove screws and both headlamp bezels.
- (2) Clean front of the headlamps.
- (3) Place headlamps on LOW beam.
- (4) Cover front of the headlamp that is not being adjusted.
- (5) Turn vertical adjustment screw (Fig. 3) until the headlamp beam pattern on screen/wall is similar to the pattern depicted in the alignment screen figure.


NOTE: When using a headlamp aiming screen, adjust the headlamps so that:

- The left edge of the beam intensity pattern is positioned within 50 mm (2 in.) left to 50 mm (2 in.) right of the vertical centerline (Fig. 2).
 - The top edge of the beam intensity pattern is positioned within 25 mm (1 in.) above or 75 mm (3 in.) below the headlamp horizontal centerline (Fig. 2).
- (6) Cover front of the headlamp and adjust the other headlamp beam as instructed below.
 - (7) Rotate the adjustment screws until the beam intensity pattern on the aiming screen/wall is aligned

within the headlamp the alignment screen target (Fig. 2).


(8) Cover front of headlamp that has been adjusted and adjust the other headlamp beam as instructed above.

(9) Install headlamp bezels. Tighten the screws securely.

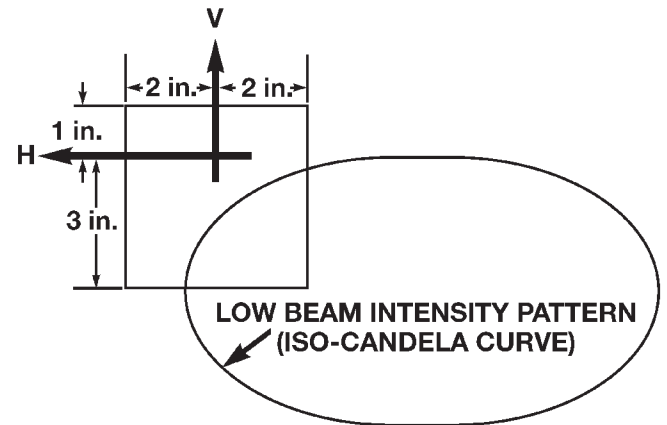

80b6b3aa

Fig. 2 Headlamp Alignment Screen Target

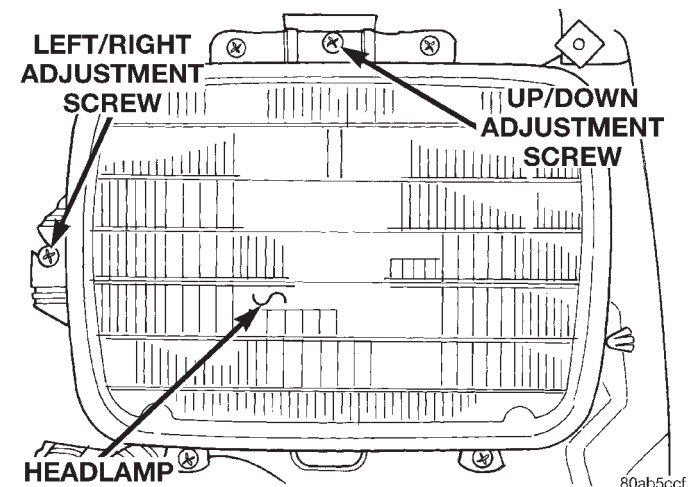

80ab5ccf


Fig. 3 Headlamp Beam Adjustment Screws

FOG LAMP ADJUSTMENT

Prepare an alignment screen. A properly aligned fog lamp will project a pattern on the alignment screen 100 mm (4 in.) below the fog lamp centerline and straight ahead (Fig. 4).

Rotate the adjustment screw to adjust beam height (Fig. 5).

SERVICE PROCEDURES (Continued)

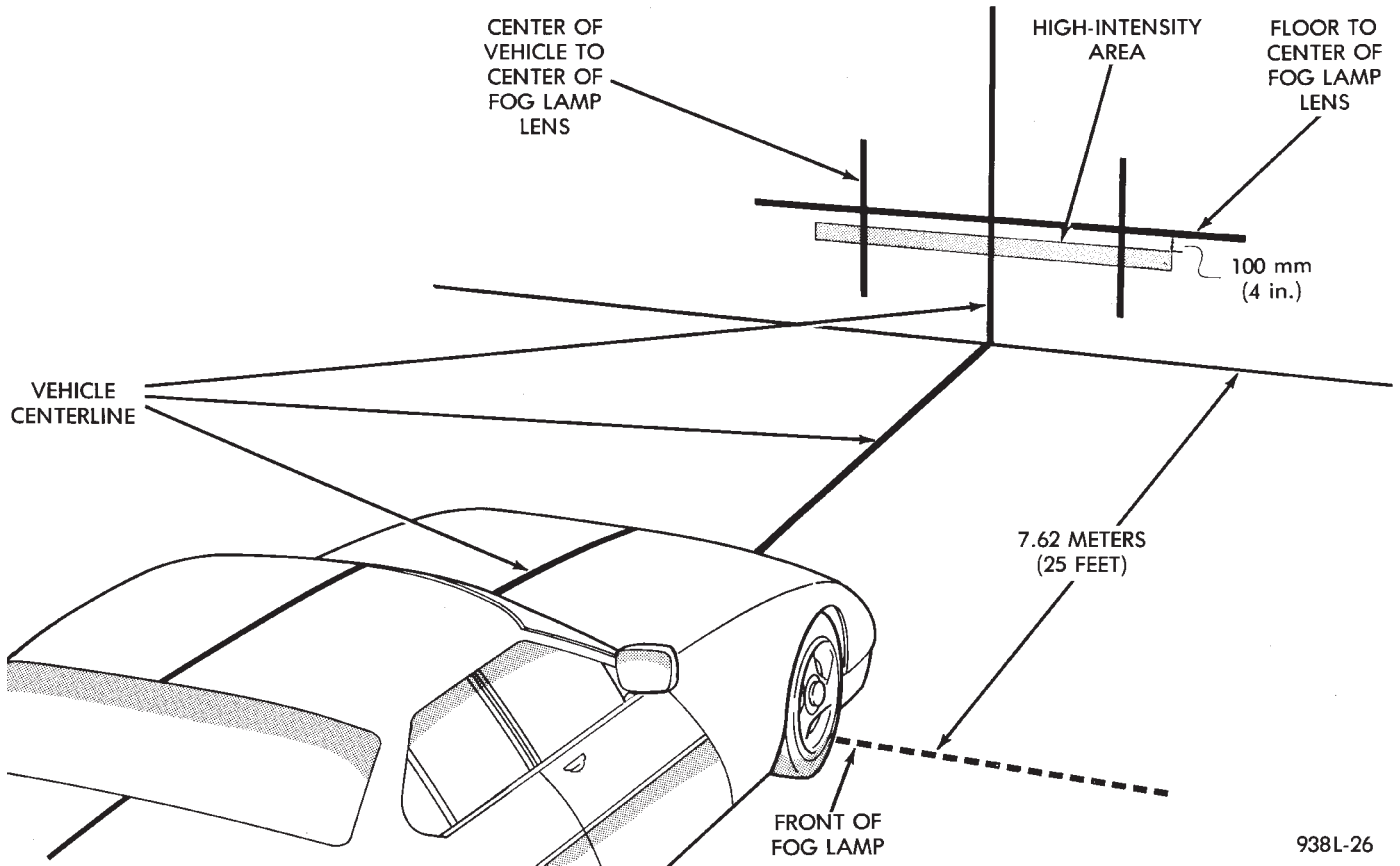


938L-26


Fig. 4 Fog Lamp Alignment —Typical

SPECIAL TOOLS

HEADLAMP ALIGNMENT

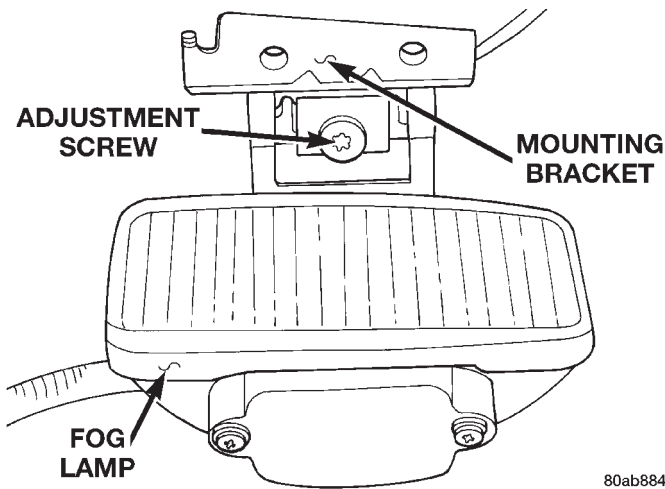

80ab8849

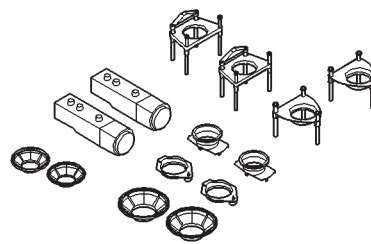

Headlamp Aiming Kit C-4466-A

Fig. 5 Fog Lamp Adjustment

LAMP BULB SERVICE

INDEX

	page		page
REMOVAL AND INSTALLATION			
BACK-UP/REAR TURN SIGNAL/TAIL LAMP BULB	9	FRONT PARK/TURN SIGNAL LAMP BULB	8
CARGO LAMP BULB	10	HEADLAMP BULB	8
CENTER HIGH MOUNTED STOP LAMP (CHMSL) BULB	10	LICENSE PLATE LAMP BULB	9
FOG LAMP BULB	8	MAP READING LAMP BULB	10
		SIDE MARKER LAMP BULB	9
		UNDERHOOD LAMP BULB	10
		VISOR VANITY LAMP BULB	11

REMOVAL AND INSTALLATION

HEADLAMP BULB

REMOVAL

- (1) Remove the screws attaching the bezel to the grille opening panel (Fig. 1).
- (2) Remove screws attaching the retaining ring to the headlamp canister.
- (3) Disconnect the headlamp bulb wire harness connector.
- (4) Separate the sealed beam from the vehicle.

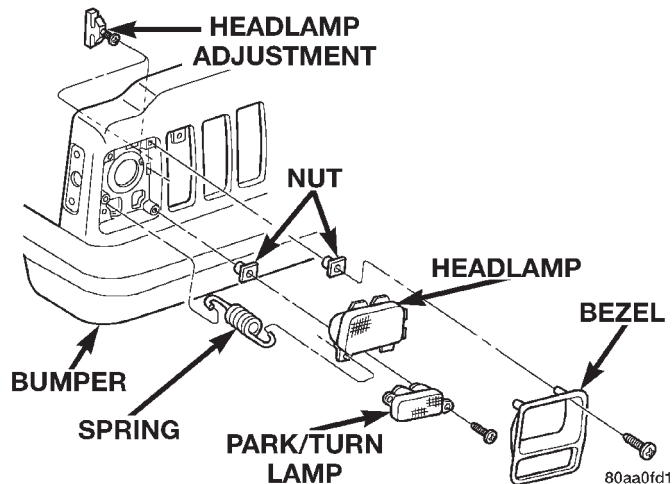


Fig. 1 Headlamp Bezel

INSTALLATION

- (1) Connect wire harness connector.
- (2) Position bulb in canister.
- (3) Position retaining ring on sealed beam and install screws.
- (4) Install headlamp bezel.

FOG LAMP BULB

REMOVAL

- (1) Remove the screws attaching the access cover to the bottom of the fog lamp (Fig. 2).
- (2) Remove spring clip securing bulb to fog lamp.
- (3) Disconnect wire connectors at bulb.
- (4) Remove bulb element from fog lamp.

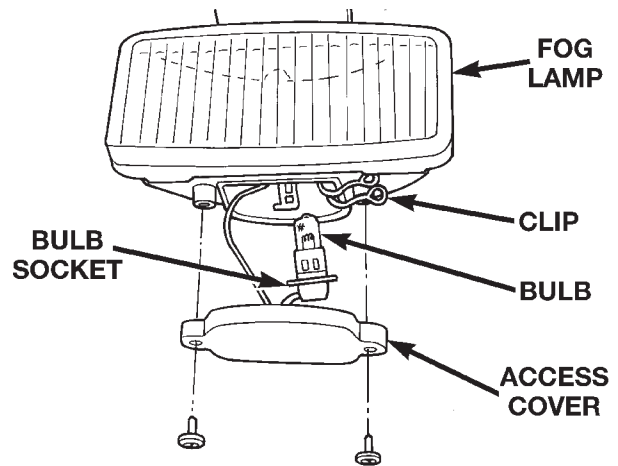


Fig. 2 Fog Lamp Components

INSTALLATION

CAUTION: Do not touch the bulb glass with fingers or other oily surfaces. Reduced bulb life will result.

- (1) Position bulb element in fog lamp.
- (2) Connect wire connectors at bulb.
- (3) Install spring clip securing bulb to fog lamp.
- (4) Install screws attaching the access cover to the bottom of the fog lamp.


FRONT PARK/TURN SIGNAL LAMP BULB

REMOVAL

- (1) Remove headlamp bezel.

REMOVAL AND INSTALLATION (Continued)

- (2) Remove screws attaching park/turn signal lamp housing to grille opening panel.
- (3) Rotate bulb socket one-third turn counter-clockwise and remove it from lamp housing (Fig. 3).
- (4) Pull bulb from socket.

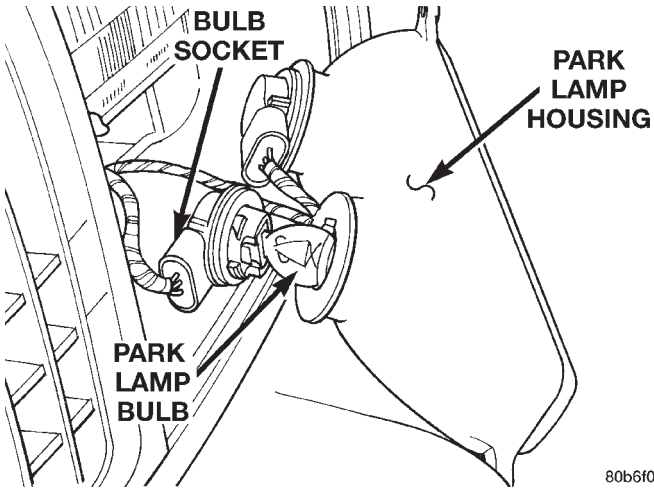

80b6f03a

Fig. 3 Park/Turn Signal Lamp Bulb


INSTALLATION

- (1) Install bulb in socket.
- (2) Install socket in lamp housing.
- (3) Install park/turn signal lamp housing.
- (4) Install headlamp bezel.

SIDE MARKER LAMP BULB

REMOVAL

- (1) Remove screws attaching side marker lamp housing.
- (2) Rotate bulb socket counter-clockwise and pull from back side of lamp housing (Fig. 4).
- (3) Pull bulb from socket.

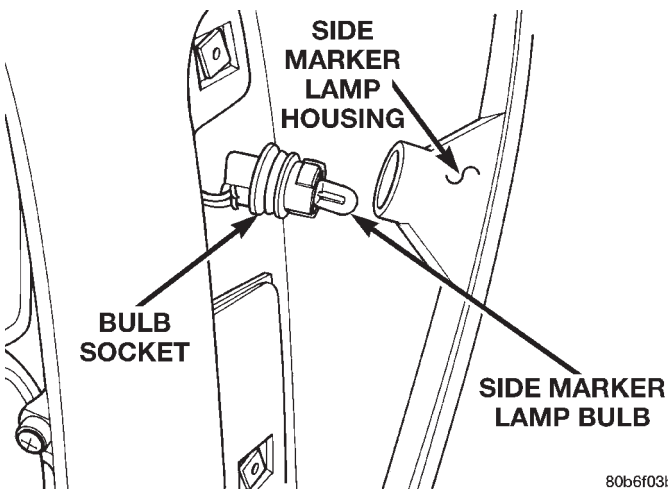

80b6f03b

Fig. 4 Side Marker Lamp


INSTALLATION

- (1) Install bulb in socket.
- (2) Install bulb and socket in back of side marker lamp housing.
- (3) Install side marker lamp housing.

BACK-UP/REAR TURN SIGNAL/TAIL LAMP BULB

REMOVAL

- (1) Remove tail lamp housing.
- (2) Rotate bulb socket one-third turn counter-clockwise and remove bulb socket from lamp housing (Fig. 5).
- (3) Pull bulb from socket.

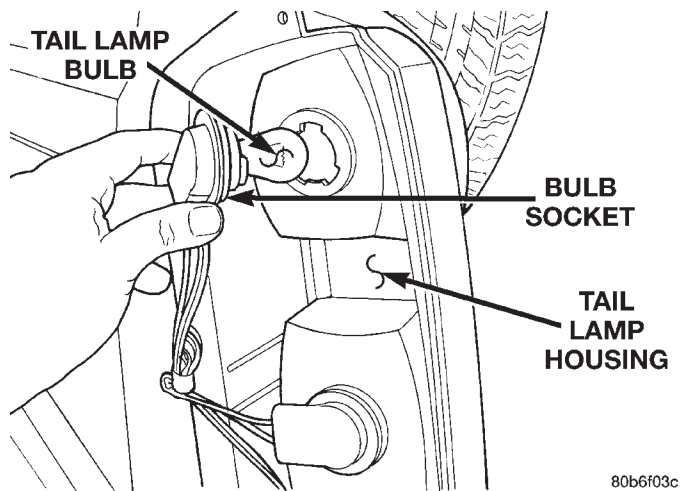

80b6f03c

Fig. 5 Bulb Socket Removal

INSTALLATION

- (1) Install bulb in socket.
- (2) Install bulb and socket in lamp housing.
- (3) Install lamp housing.

LICENSE PLATE LAMP BULB

REMOVAL

- (1) Remove screws attaching license plate lamp housing to liftgate.
- (2) Rotate bulb socket counter-clockwise and remove bulb socket from lamp housing.
- (3) Pull bulb from socket.


INSTALLATION

- (1) Install bulb in lamp socket.
- (2) Install bulb socket in lamp housing.
- (3) Install screws attaching license plate lamp to liftgate.

REMOVAL AND INSTALLATION (Continued)

CENTER HIGH MOUNTED STOP LAMP (CHMSL) BULB**REMOVAL**

- (1) Remove the screws attaching the lamp housing to the liftgate.
- (2) Rotate bulb socket 1/4 turn counter-clockwise and pull from housing (Fig. 6).
- (3) Pull bulb from socket.

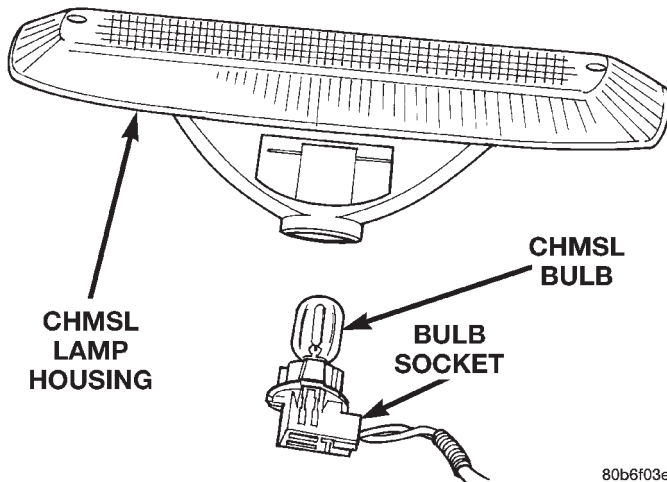*Fig. 6 CHMSL Bulb***INSTALLATION**




- (1) Push bulb into socket.
- (2) Position socket in lamp and rotate 1/4 turn clockwise.
- (3) Install screws attaching lamp housing to the liftgate.

UNDERHOOD LAMP BULB**REMOVAL**

- (1) Insert a small flat blade in the access slot between the lamp base and lamp lens.
- (2) Pry the lamp lens upward and remove the lamp lens (Fig. 7).
- (3) Depress the bulb terminal inward (Fig. 8) to release the bulb.

INSTALLATION

- (1) Engage the replacement bulb wire loop to the terminal closest to the lamp base wire connector.
- (2) Depress the opposite terminal inward and engage the remaining bulb wire loop.
- (3) Position the lamp lens on the lamp base and press into place.

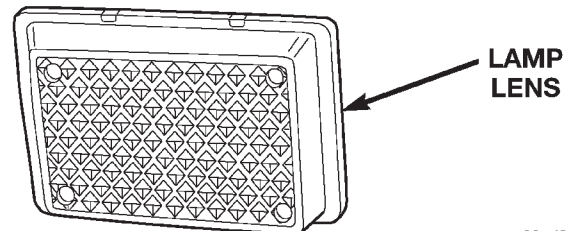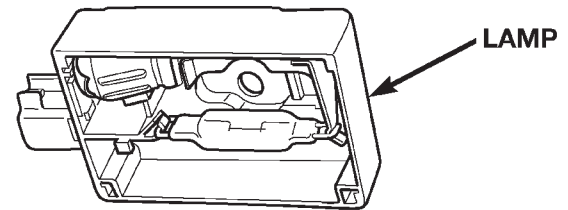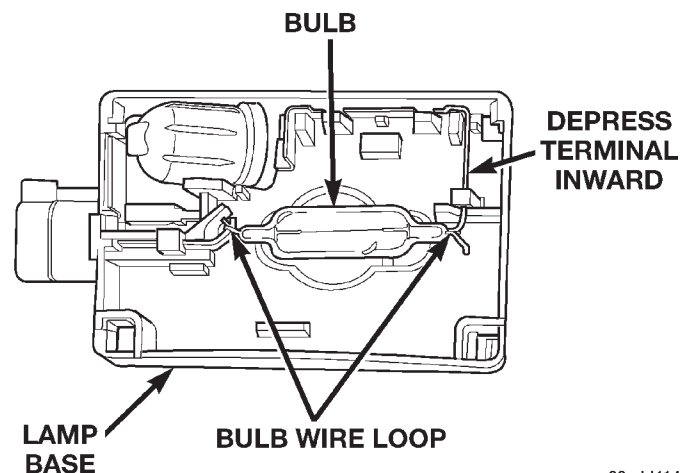*Fig. 7 Underhood Lamp Lens**Fig. 8 Underhood Lamp Bulb***CARGO LAMP BULB****REMOVAL**

- (1) Insert a small flat blade into the access slots (Fig. 9).
- (2) Carefully pry the lens from the lamp.
- (3) Grasp bulb and pull from lamp.


INSTALLATION

- (1) Position bulb in lamp and snap into place.
- (2) Position the lens at the lamp housing and force it upward into the housing until the mounting tabs are seated on the lamp mounting pins.

MAP READING LAMP BULB**REMOVAL**

- (1) Insert a flat blade screwdriver in slot at front of lens (Fig. 10).
- (2) Rotate the screwdriver until lens snaps out of the housing.

REMOVAL AND INSTALLATION (Continued)

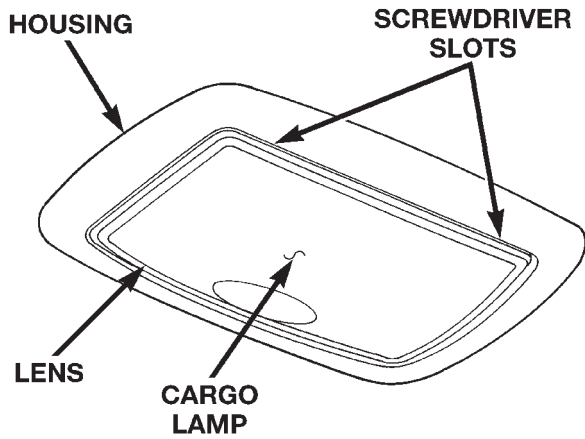

80ae0eb3

Fig. 9 Cargo Lamp Lens

- (3) Remove lens from housing.
- (4) Remove bulb from terminals.


INSTALLATION

- (1) Insert bulb into reading lamp terminals.
- (2) Replace lens by holding lens level and pushing rearward into housing.
- (3) Push lens up to snap into housing.

VISOR VANITY LAMP BULB

REMOVAL

- (1) Using a small flat blade, carefully pry each corner of lens outward from lamp.

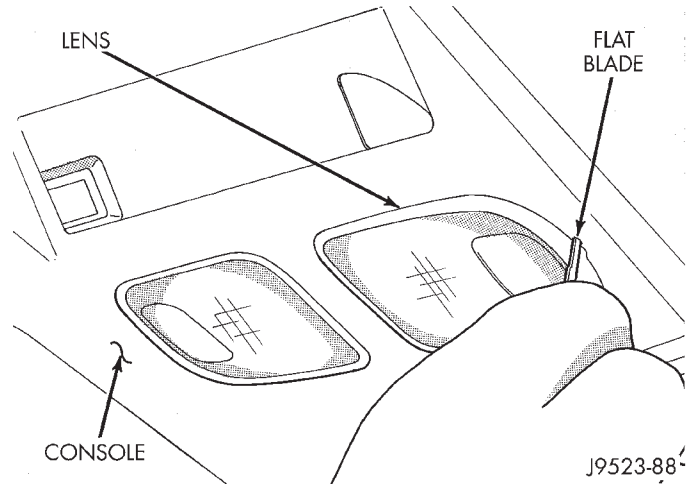

J9523-88

Fig. 10 Reading Lamp Bulb

- (2) Separate lens from lamp.
- (3) Grasp bulb and pull outward.

INSTALLATION

- (1) Position bulb in socket and push into place.
- (2) Position lens on lamp and snap into place.

LAMP SERVICE

INDEX

	page		page
REMOVAL AND INSTALLATION			
BACK-UP/REAR TURN SIGNAL/TAIL LAMP	13	HEADLAMP	12
CARGO LAMP	14	LICENSE PLATE LAMP	14
CENTER HIGH MOUNTED STOP LAMP (CHMSL)	14	MAP/READING LAMP	15
FOG LAMP	12	SIDE MARKER LAMP	13
FRONT PARK/TURN SIGNAL LAMP	13	UNDERHOOD LAMP	14
		VISOR VANITY LAMP	15

REMOVAL AND INSTALLATION

HEADLAMP

REMOVAL

- (1) Remove the screws attaching the bezel to the grille opening panel
- (2) Remove the screws attaching the retaining ring to the headlamp bucket.
- (3) Disconnect the headlamp bulb wire harness connector (Fig. 1).
- (4) Separate the bulb from the vehicle.
- (5) Remove the spring attaching the headlamp bucket to the grille opening panel (Fig. 2).
- (6) Slide the headlamp bucket downward to disengage it from the headlamp adjusting screws.

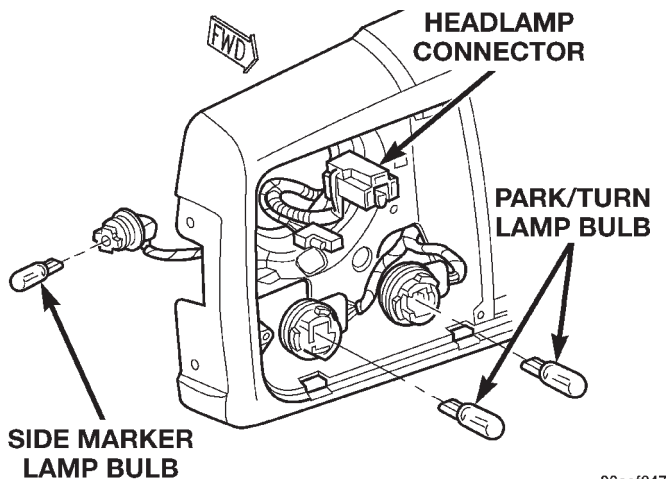


Fig. 1 Headlamp Connector

INSTALLATION

- (1) Position the headlamp bucket in the grille opening panel and slide the headlamp bucket upward to engage it with the headlamp adjusting screws.

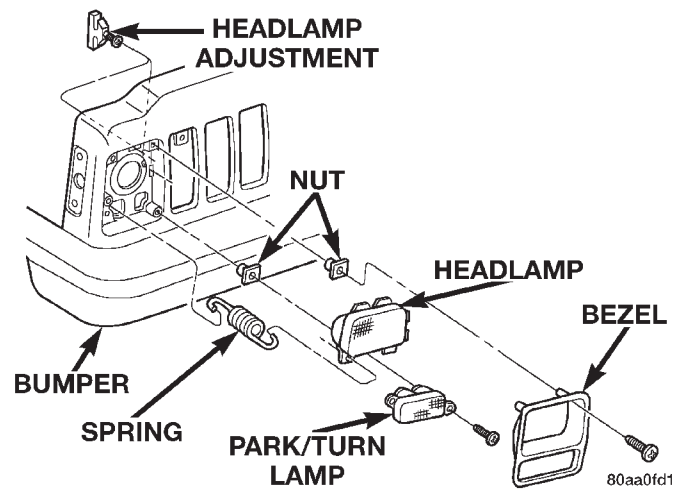


Fig. 2 Headlamp

- (2) Install the spring attaching the headlamp bucket to the grille opening panel.
- (3) Connect the wire harness connector.
- (4) Position the bulb in the bucket.
- (5) Position retaining ring on the headlamp bulb and install screws.
- (6) Install the headlamp bezel.

FOG LAMP

REMOVAL

- (1) Disconnect the fog lamp wire harness connector.
- (2) Remove the screws attaching the fog lamp to the support (Fig. 3).
- (3) Separate the fog lamp from the vehicle.

INSTALLATION

- (1) Position the fog lamp in the support bracket and install the screws.
- (2) Connect the fog lamp wire harness connector.

REMOVAL AND INSTALLATION (Continued)

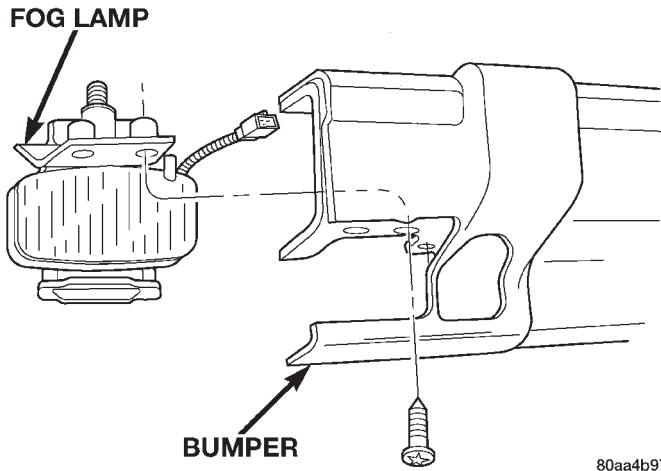


Fig. 3 Fog Lamp

80aa4b97

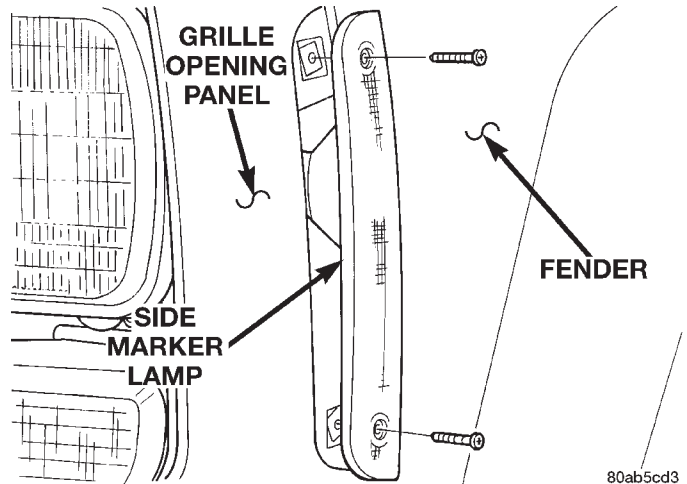


Fig. 5 Side Marker Lamp

80ab5cd3

FRONT PARK/TURN SIGNAL LAMP

REMOVAL

- (1) Remove the headlamp bezel.
- (2) Remove the screws attaching the park/turn signal lamp housing to the grille opening panel (Fig. 4).
- (3) Remove the bulb sockets and separate from the vehicle.

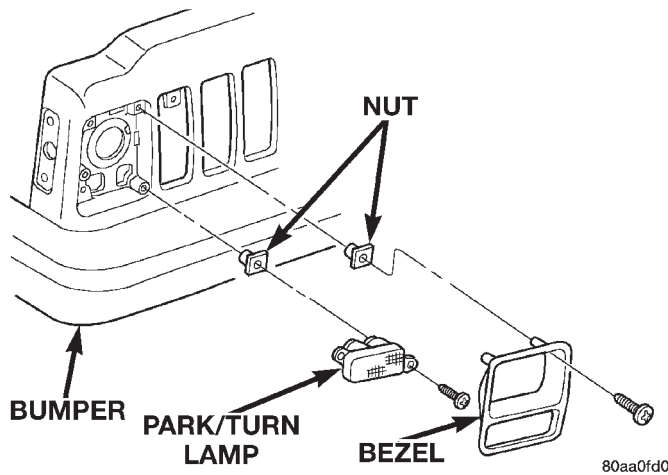


Fig. 4 Park/Turn Signal Lamp

80aa0fd0

INSTALLATION

- (1) Install bulbs and sockets in the lamp housing.
- (2) Position the park/turn signal lamp housing on the grille opening panel and install the screws.
- (3) Install the headlamp bezel.

SIDE MARKER LAMP

REMOVAL

- (1) Remove screws attaching side marker lamp lens to grille opening panel (Fig. 5).
- (2) Remove bulb and socket from back side of lamp.

INSTALLATION

- (1) Install bulb and socket in back of side marker lamp.
- (2) Install side marker lamp in grille opening panel.

BACK-UP/REAR TURN SIGNAL/TAIL LAMP

REMOVAL

- (1) Open the liftgate.
- (2) Remove the bolts attaching the tail lamp housing to the quarter panel (Fig. 6).
- (3) Grasp the lamp and pull to disengage it from the grommet at the base of the lamp.
- (4) Rotate the bulb sockets one-third turn and remove the bulb sockets from the lamp housing.

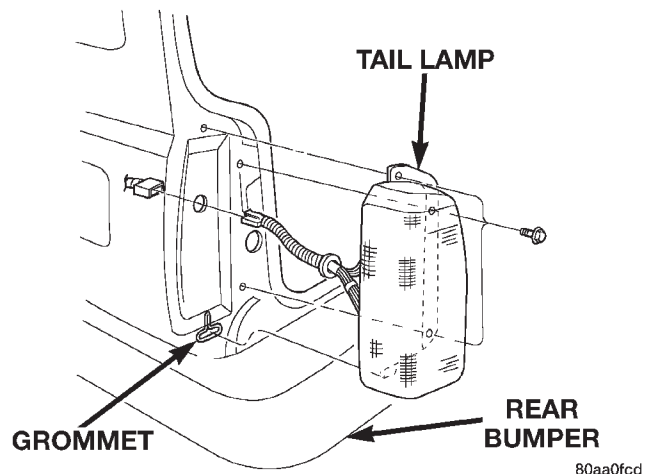


Fig. 6 Tail Lamp

80aa0fcd

INSTALLATION

- (1) Install the bulb and sockets in the lamp housing.
- (2) Position the lamp housing in the quarter panel and push to engage the grommet.

REMOVAL AND INSTALLATION (Continued)

- (3) Install the lamp housing screws. Tighten the screws securely.
- (4) Install the bolts attaching the tail lamp housing to the quarter panel.
- (5) Close the liftgate.

CENTER HIGH MOUNTED STOP LAMP (CHMSL)

REMOVAL

- (1) Remove the screws attaching the CHMSL to the liftgate (Fig. 7).
- (2) Disconnect the wire harness connector.
- (3) Separate the CHMSL from the vehicle.

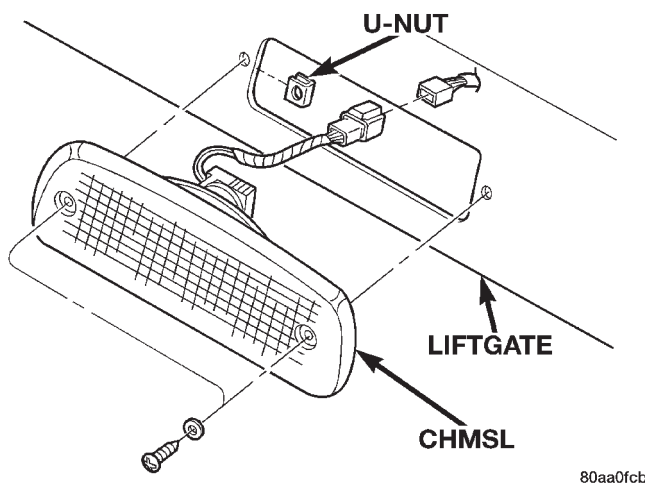


Fig. 7 Center High Mounted Stop lamp

INSTALLATION

- (1) Connect the wire harness connector.
- (2) Position the CHMSL on the liftgate.
- (3) Install the screws attaching the CHMSL to the liftgate.

LICENSE PLATE LAMP

REMOVAL

- (1) Remove screws attaching the license plate lamp to the liftgate.
- (2) Remove the bulb from the lamp socket.

INSTALLATION

- (1) Install bulb in the lamp socket.
- (2) Position the license plate lamp on the liftgate and install screws.

UNDERHOOD LAMP

The underhood lamp is installed on the hood inner panel. The lamp illuminates when the hood is opened. A switch that is integral with the lamp base controls the operation. The switch provides automatic

ON/OFF functions each time the hood is opened and closed.

REMOVAL

- (1) Disconnect the wire harness connector from the lamp.
- (2) Remove lamp lens.
- (3) Remove bulb.
- (4) Remove screw attaching underhood lamp to the inner hood panel.
- (5) Separate underhood lamp from vehicle.

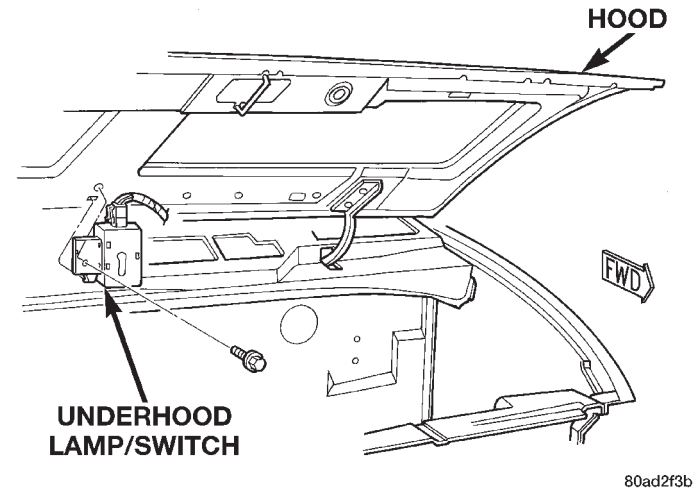


Fig. 8 Underhood Lamp

INSTALLATION


- (1) Position underhood lamp on hood inner panel. Ensure anti-rotation tab is positioned in slot on hood inner panel.
- (2) Install the attaching screw through the lamp and into the hood panel (Fig. 8). Tighten the screw securely.
- (3) Fold lamp housing over and firmly press onto base to snap into place.
- (4) Connect the wire harness connector to the lamp.

CARGO LAMP

REMOVAL


- (1) Insert a small flat blade into the access slots (Fig. 9).
- (2) Carefully pry the lens from the lamp.
- (3) Disengage the lens mounting tabs from the lamp mounting pins (Fig. 10).
- (4) Remove the fasteners attaching the lamp to the roof.
- (5) Remove the lamp housing from the headliner cavity.
- (6) Disconnect the wire harness connector.

REMOVAL AND INSTALLATION (Continued)

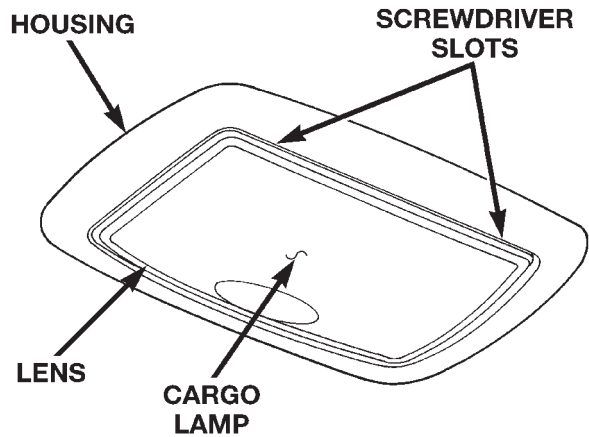

80ae0eb3

Fig. 9 Cargo Lamp

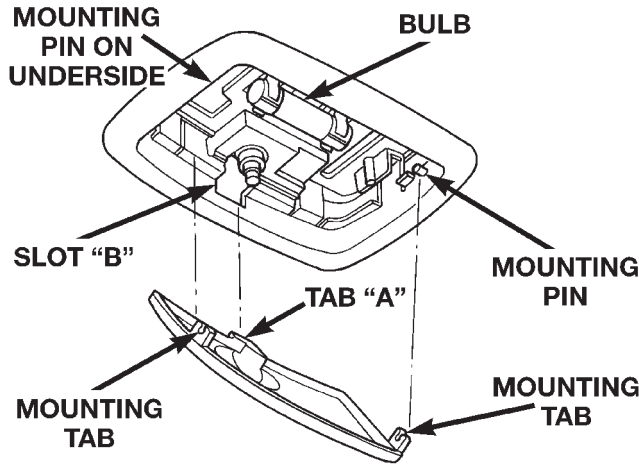

80ae0eb2

Fig. 10 Cargo Lamp Lens

INSTALLATION

(1) Position the dome lamp housing at the headliner cavity.

- (2) Connect the wire harness connector.
- (3) Install the fasteners attaching the lamp to the roof.
- (4) Position the lens at the lamp housing and force it upward into the housing until the mounting tabs are seated on the lamp mounting pins.

MAP/READING LAMP

The map/reading lamp can be serviced by removing the overhead console. Refer to Group 8C, Overhead Console for removal/installation procedures.

VISOR VANITY LAMP

REMOVAL

- (1) Fold down sunvisor.
- (2) Starting at the base of the lamp assembly and working right-to-left, use a small flat blade, carefully pry lamp from visor.
- (3) Disconnect visor lamp wire connector and remove from vehicle.

INSTALLATION

- (1) Position visor lamp at visor and connect visor lamp wire connector.
- (2) Position visor lamp in visor and press into place.

LAMP SYSTEMS

INDEX

	page		page
GENERAL INFORMATION		REMOVAL AND INSTALLATION	
DAYTIME RUNNING LAMP MODULE	16	DAYTIME RUNNING LAMP MODULE	17
SENTINEL HEADLAMP DELAY MODULE	16	SENTINEL HEADLAMP DELAY MODULE	16

GENERAL INFORMATION

SENTINEL HEADLAMP DELAY MODULE

The Headlamp Module delays the de-activation of the headlamps for 45 ± 15 seconds after the ignition switch is turned OFF. The driver engages the module by turning the ignition switch OFF, then turning the headlamps OFF.

DAYTIME RUNNING LAMP MODULE


The Daytime Running Lights (Headlamps) System is installed on vehicles manufactured for sale in Canada only. The headlamps are illuminated when the ignition switch is turned to the ON position and the vehicle is put into motion. The DRL module receives a vehicle-moving signal from the vehicle speed sensor. This provides a constant **headlamps-on** condition as long as the vehicle is moving. The lamps are illuminated at approximately 30 percent of normal intensity.

REMOVAL AND INSTALLATION

SENTINEL HEADLAMP DELAY MODULE

REMOVAL

- (1) Remove the knee blocker.
- (2) Remove the screw that attaches the module to the inside of the instrument panel (Fig. 1).
- (3) Disconnect the wire harness connector and remove the module from the instrument panel.

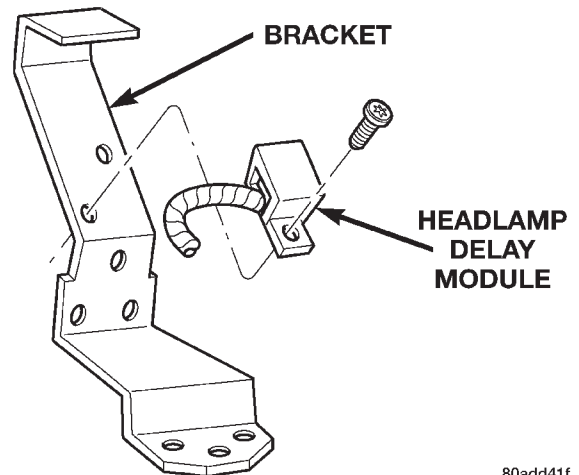

80add41f

**Fig. 1 Headlamp Delay Module
INSTALLATION**

- (1) Position the module inside the I/P and connect the wire harness connector to the module.
- (2) Install the screw that attaches the module to the inside of the instrument panel.
- (3) Install the knee blocker.

REMOVAL AND INSTALLATION (Continued)

DAYTIME RUNNING LAMP MODULE**REMOVAL**

The Daytime Running Lights (DRL) module is located on the right fender inner panel adjacent to the dash panel (Fig. 2).

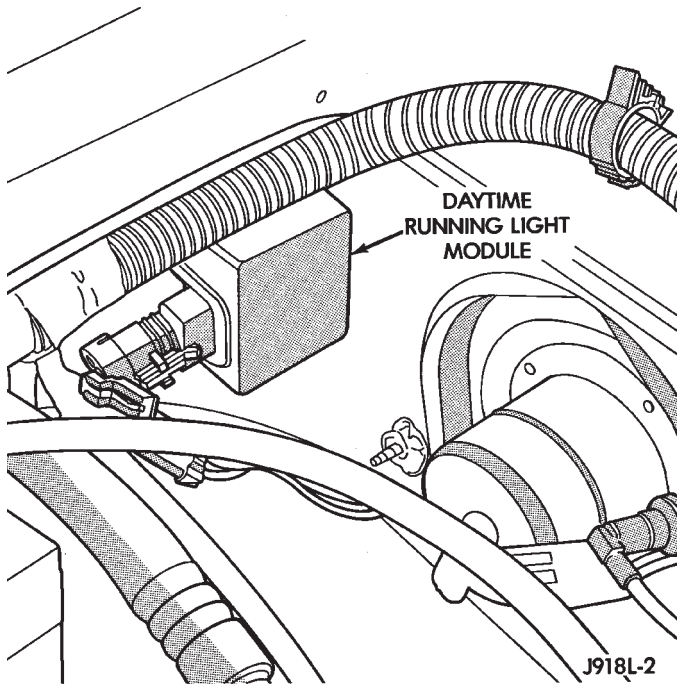


Fig. 2 Daytime Running Lamp Module

(1) Disconnect the wire harness connector from the module.

(2) Remove the screws that attach the module to the fender inner panel.

(3) Remove the module from the fender inner panel.

INSTALLATION

(1) Position the module on the right fender inner panel.

(2) Install the attaching screws. Tighten the screws securely.

(3) Connect the wire harness connector to the module.

BULB APPLICATION

INDEX

	page		page
SPECIFICATIONS		INTERIOR LAMPS	18
EXTERIOR LAMPS	18		

SPECIFICATIONS

EXTERIOR LAMPS

CAUTION: Do not use bulbs that have a higher candle power than the bulb listed in the Bulb Application Table. Damage to lamp can result. Do not touch halogen bulbs with fingers or other oily surfaces. Bulb life will be reduced.

The following Bulb Application Table lists the lamp title on the left side of the column and trade number or part number on the right.

LAMP	BULB
Back-up	3157
Center High Mounted Stoplamp	921
Fog lamp	H3
Front Side Marker	168
Headlamp/Sealed Beam	H6054
License Plate	168
Park/Turn Signal	3157
Tail/Stop	3157
Rear Turn Signal	3157

INTERIOR LAMPS

CAUTION: Do not use bulbs that have a higher candle power than the bulb listed in the Bulb Application Table. Damage to lamp can result.

Service procedures for most of the lamps in the instrument panel, Instrument cluster and switches are located in Group 8E, Instrument Panel and Gauges. Some components have lamps that can only be serviced by an Authorized Service Center (ASC) after the component is removed from the vehicle.

The following Bulb Application Tables lists the lamp title on the left side of the column and trade number or part number on the right.

LAMP	BULB
Cargo	561
Dome	561
Dome/Reading	906
Overhead Console	912
Under Hood	105
Vanity Mirror	74
Underpanel Courtesy	168

INDICATOR LAMPS

LAMP	BULB
A/C Control	74
Airbag	74
Anti-lock Brake	74
Brake Warning	74
Check Engine	74
Check Gauges	74
Cigar Lighter	53
Coolant Temp High	194
Cruise	74
Fasten Seat Belts	74
Four Wheel Drive	74
Generator	194
Heater Control	74
High Beam	74
Illumination	103
Low Fuel	74
Low Oil Pressure	194
Low Washer Fluid	74
Radio	ASC
Security	74
Transfer Case	658
Transmission Floor Shift	658
Turn Signal	74
Upshift	74